



Operators Manual

**** M2-D922 ****

USE IN CONJUNCTION WITH OEM MANUALS (ENCLOSED)

Unit Serial No. _____

Yanmar Engine

L100V – Serial No. _____

Gorman-Rupp® Pump

STS-GR82E2 – Serial No. _____

Links relating to this Manual

www.stsmixers.com

www.yanmar.com

www.grpumps.com

Dealer

This page left blank intentionally

TABLE OF CONTENTS

	PAGE
STS Inc. Warranty.....	6
Safety Statements.....	7-10
Safety Markings.....	11
Main Working Components (<i>Photo</i>).....	12
M2-922 Hose Connections	13
Introduction to the M2-D922	14
M2-D922 Foot Print (<i>top view</i>).....	15
M2-D922 General Data Sheet.....	16
Identifying Your Machine & Components.....	17

SECTION II (*Description, Care and Maintenance*)

Diesel powered centrifugal pump.....	19-22
3-Way Valves	23
Filter shear system.....	24-25
Venturi mixing tee.....	26
Wash wand.....	27
Dry hopper with table & hopper valve.....	28
Internal tank jets	29-30

SECTION III (*Set-up and installation of unit in Detail*)

Permanent mounting of unit.....	32
Portable use of unit.....	32

TABLE OF CONTENTS

	PAGE
<u>SECTION IV</u> (<i>Operating the M2-D922 Unit.</i>)	
Site set-up and pre-check.....	34
Starting the engine driven pump.....	35
Typical mixing operation.....	36-37
Typical transfer / off-loading operation.....	38
Shutdown, cleanup & storage	
Warm weather.....	39
Cold/ freezing weather.....	40
Prolonged periods of storage.....	41
Fluid Recovery Operation (basic)	42
 <u>SECTION V</u> (<i>Trouble shooting</i>)	
Trouble Shooting the M2-922	44-45
 <u>SECTION VI</u> (<i>Periodic Maintenance & Repair Information</i>)	
Maintenance Schedule.....	47
Centrifugal Trash Pump Seal Replacement.....	48
Bolt torque Specifications.....	49
Notes.....	50

TABLE OF CONTENTS

	PAGE
<u>SECTION VII</u> (<i>OEM Repair / Information</i>)	
GR Centrifugal Pump Owner's Manual.....	52-63
Engine Manufacture Customer Help (web-site)	64
Gruvloc® Pipe Couplings	65-67
 <u>SECTION VIII</u> (<i>Parts Manual - version 1</i>)	
M2-D922 PARTS MANUAL.....	69-71
 <u>SECTION IX</u> (<i>Parts Manual - version 2</i>)	
MAC-JR-1200D Mixer PARTS MANUAL.....	73-75



Limited Warranty

United States and Canada

Surface to Surface Inc. or its subsidiary which last sold the product, warrants new products sold by it for use in the United States and Canada to be, at the time of manufacture, free from defects in workmanship and materials. This warranty covers for a period of **Twelve (12) Months** of operation from the date of delivery for initial use, whichever comes first.

Exclusions and Additional Limitations

1. This warranty relates to the condition of the product at the time of manufacture and does not cover parts or service as a result of:
 - (a) Normal wear and tear or required maintenance including, without limitation, adjustments or replacement of components subject to wear and tear, such as belts, hoses, seals and/or packing, fuses, bulbs, switches and ignition parts.
 - (b) Abuse including, without limitation, neglect, improper operation, misapplication, overloading, accident or alterations not approved by Surface to Surface Inc.
 - (c) Lack of maintenance, including, without limitation, failure to inspect and maintain, improper repair, use of "unapproved parts", cracked engine heads and blocks unless caused by the failure of an internally lubricated part or repair of engine valves, rings or guides.
 2. The Company's warranty does not apply to purchased components manufactured by others where separate warranty is made by the manufacture of such components and will be applied as interpreted by the supplier.
 3. All claims under his warranty shall be submitted in writing by the distributor to the Company, which will be the sole judge in determining the merits of the claim.
 4. The company shall have the right to have all products or parts claimed to be defective returned to it and the cost of shipping such items shall be borne by the distributor.
-

Warranty Registration Card

In order to help us provide complete service for our product, please complete this card and return it.

If not returned, all requests for warranty will be denied.

Print Name:

Address:

City:State/Province.....Zip/PC.....

Model No. Serial No.

Date of Purchase Dealer


**Return to: Surface to Surface Inc.
5150 Forest Rd. RR#3
Watford, Ontario, Canada
N0M 2S0**

SAFETY STATEMENTS

Your personal safety and the safe operation of this unit are the concern of Surface to Surface Inc., and by reading and understanding this manual and understanding the safety statements, you will decrease the risk of personal and equipment damage.

Safety statements are listed here and throughout this manual to draw your attention to potential hazards that may be encountered while operating this piece of equipment. While reading this manual, you will notice that certain safety statements will relate directly to the operation, or maintenance of that particular part of the unit and should be followed carefully. Decals on the unit also follow the same format as the warnings in this manual, and therefore should be kept in good repair to alert the operator and others of the potential hazard.

The engine / motor manual also contains hazard warnings which pertain to the engine / motor and should also be followed.

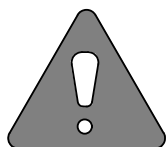

This safety alert symbol appears with most safety statements.

It means attention, become alert, your safety is involved!

Please read and abide by the message that follows the safety alert symbol.

DANGER

Danger (the word "DANGER" is in white letters with a red rectangle behind it) indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Danger is limited to the most extreme situations.

CAUTION

Caution (the word "CAUTION" is in black letters with a yellow rectangle behind it) indicates an potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

WARNING

Warning (the word "WARNING" is in black letters with an orange rectangle behind it) indicates an potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Caution "without the safety alert symbol" indicates an potentially hazardous situation that can cause damage to the, machine, personal property and / or the environment or cause the machine to operate improperly.

SAFETY STATEMENTS

The following caution statements have been drawn from the instructions in this manual. They have been assembled here for ready reference.



DANGER

IN AN EMERGENCY

rotate the throttle control lever to the STOP position to halt engine, pump, and fluid flow



WARNING

NEVER ATTEMPT TO REMOVE OR CLEAN THE FILTER SHEAR

while the unit is in operation. Serious personal injury will result.



DANGER

NEVER ATTEMPT REPAIRS OR DISASSEMBLY

without shutting off the engine / motor and disconnecting the power source. Serious personal injury will result.



CAUTION

DO NOT POSITION ANY PART OF YOUR BODY

over the hopper, valve, or mixing tee while cleaning.



WARNING

NEVER USE BODY PARTS, OR FOREIGN OBJECTS

in an attempt to unplug or clean the hopper valve or mixing tee. Serious personal injury or damage will result.



CAUTION

WHEN THE UNIT IS IN OPERATION,

the fluid in the piping may reach pressures up to 50 p.s.i. When the engine is idling, the system is still pumping fluid under pressure.



WARNING

DO NOT REMOVE OR MODIFY SAFETY COVERS OR GUARDS.

Serious personal injury will result.

M2-D922

SAFETY STATEMENTS *continued*

The following caution statements have been drawn from the instructions in this manual. They have been assembled here for ready reference.

CAUTION

TRAPPED FLUID MAY BE PRESENT and will spill out when piping, hoses, pump or filter shear are removed.

CAUTION

NEVER LEAVE LIQUID IN THE PUMP CASING, PIPING, OR HOSES during freezing weather conditions, as damage will result.
Follow instruction for winterizing.

CAUTION

AVOID ALLOWING FOREIGN MATERIAL into the Venturi Mixing Tee thru the Hopper, by keeping the valve closed when not in use.

CAUTION

BEFORE STARTING THE ENGINE, BE SURE THE PUMP IS PRIMED!
Check the pump by slowly & carefully opening the priming plug located on the centrifugal pump.
A visual inspection can be made if the fluid escapes around the plug as it is loosened. Remove the plug to view inside fluid level.
The centrifugal pump seal **WILL** be damaged if allowed to cavitate or run dry.

CAUTION

WHEN TRANSFERRING FLUID to the drill rig, fluid pressure may reach or exceed 50 p.s.i.
CHECK the drill rig manufacturers specifications regarding maximum inlet pressures allowed for their pump.

CAUTION

IMPROPER INSTALLATION OF THE MECHANICAL or GREASE SEAL will result in leakage and possible damage to the seal. All maintenance, operating and repair of this unit, must be done per the instructions in the operators manual for safety and reliability.

CAUTION

CARE MUST BE TAKEN WHEN INSTALLING THE COUPLER GASKETS. If the gaskets are not properly lubricated and installed, a leak may develop.

CAUTION

BEFORE STARTING OR RESTARTING the engine and centrifugal pump, make sure any valves installed on the pump suction inlet line are open, and the fluid level in the tank is above the suction line.

SAFETY STATEMENTS *continued*


The following caution statements have been drawn from the instructions in this manual. They have been assembled here for ready reference.

CAUTION

The manufacturer should be consulted when considering alternative uses for this piece of equipment. This unit was designed for the mixing and shearing of a dry additive, into a liquid stream. Other uses may create unforeseen safety issues and personal injury risk.

CAUTION

LIFTING LUGS OR THE LIFTING POINT(S) identified and labelled on the skid structure must be used in order to safely lift and transport the unit.

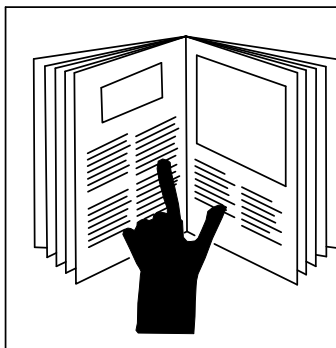

⚠ WARNING


REFER TO THE SAFETY STATEMENTS IN THE ENGINE OEM MANUAL AND THIS MANUAL REGARDING THESE OPERATIONS.

Safety Markings

Hazard and warning markings have been placed at appropriate points on the unit. International symbols have been used, in order to ensure universal understanding of the nature of the hazard. Please comply with all warnings and markings to ensure safe use of the equipment. These include but are not limited to:

- | | |
|---------------------------|--|
| a) Lifting points | b) Flammable Liquids |
| c) High temperature areas | d) Personal Protection recommendations |
| e) Personal dangers | f) Equipment dangers |
| g) Operating instructions | h) Fluid flow direction |

SOME EXAMPLES THAT MAY BE FOUND ON THE EQUIPMENT

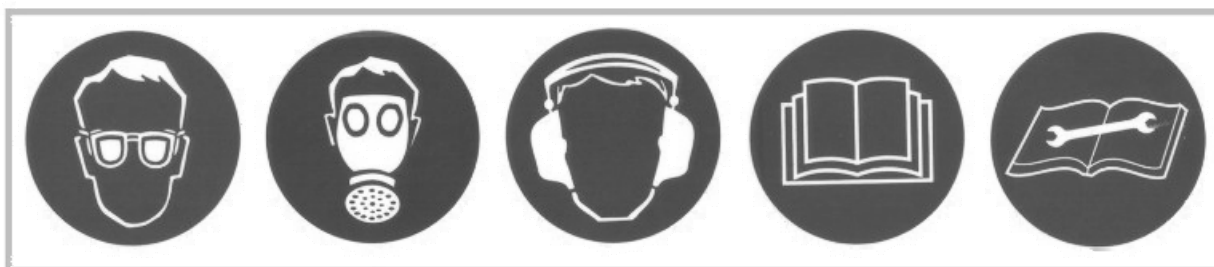

Personal Protection, Read and understand Operator's manual and Maintenance manual



Lifting Point



Flammable Liquid



Hot Surface



Lifting Point




Fluid Flow Direction

CLEAN FILTER DAILY

Maintenance Instructions

M2-D922


Main Working Components

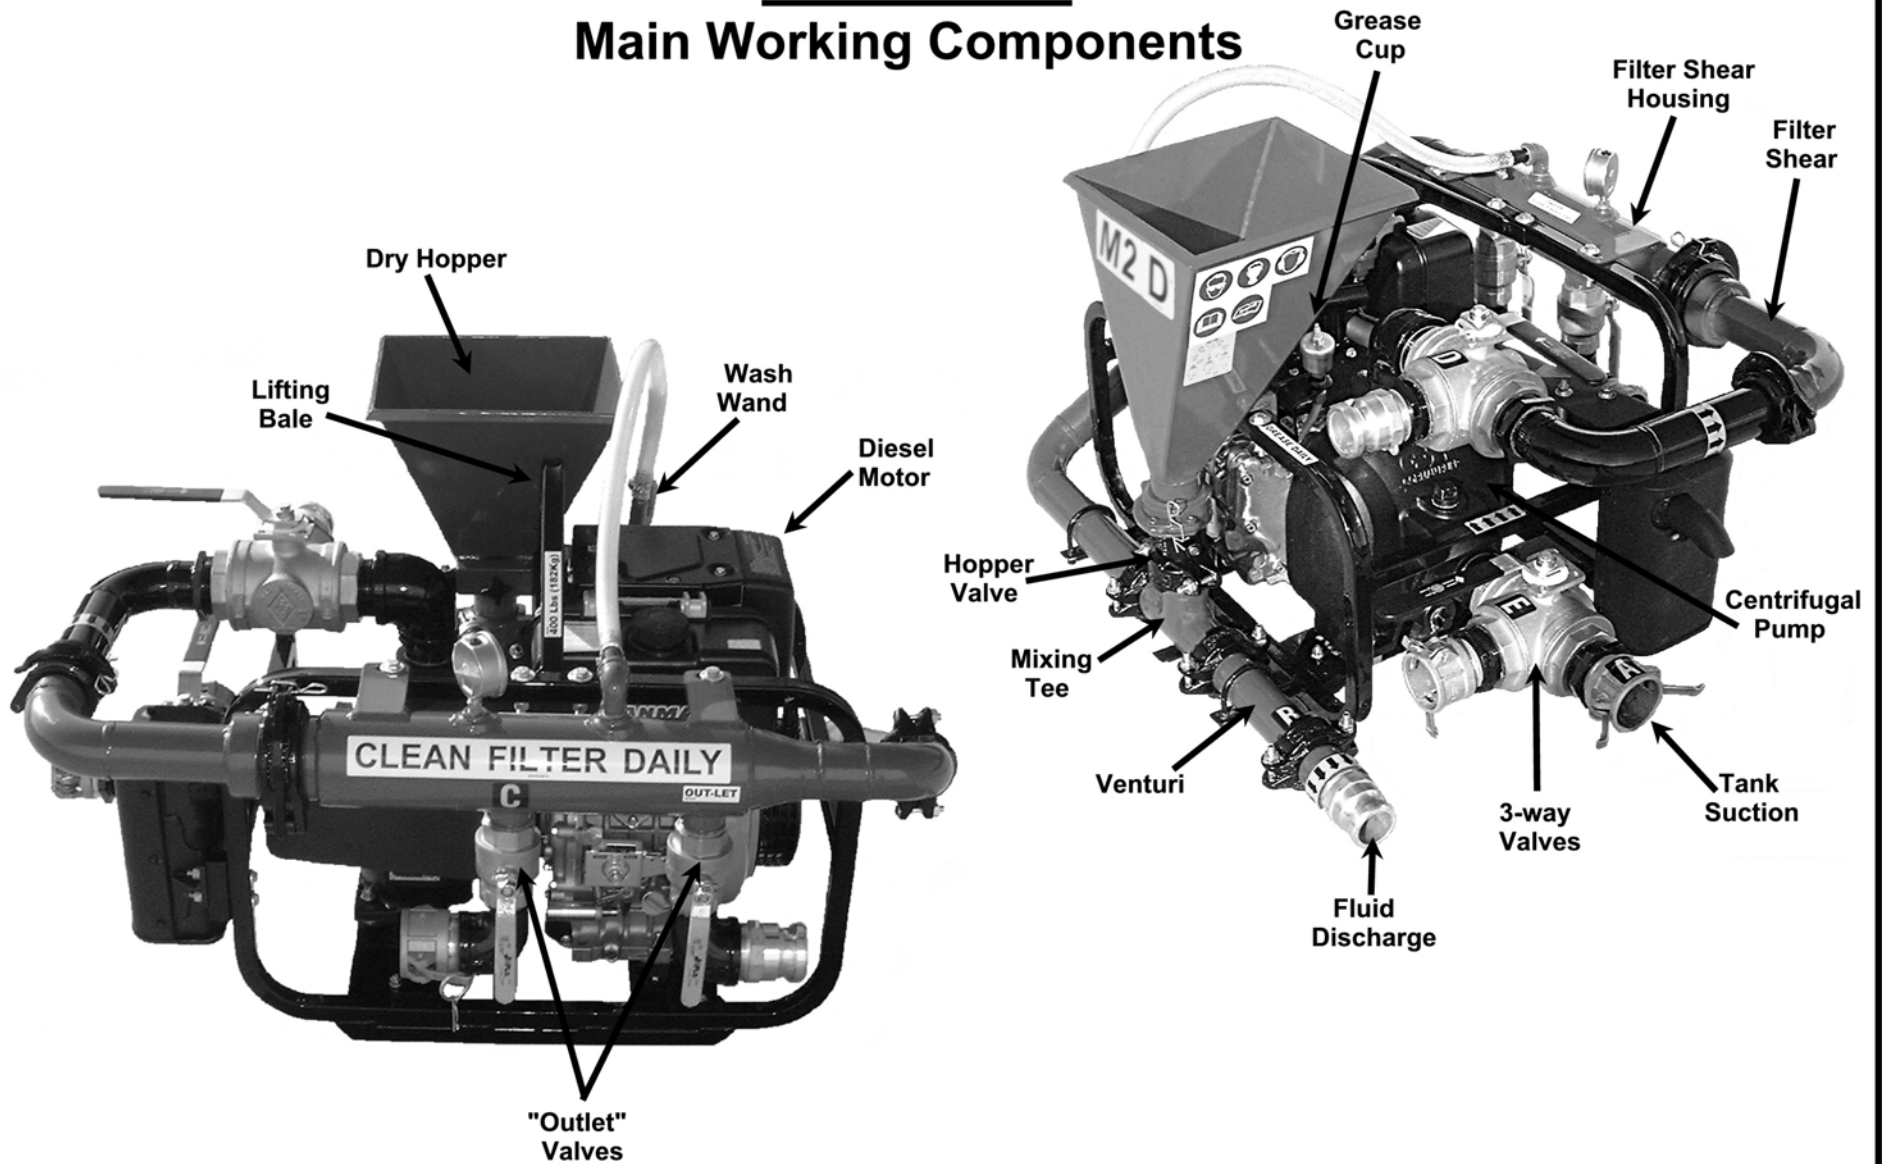

Surface to Surface Inc.®

M2-D922

(Hose Hook-ups)

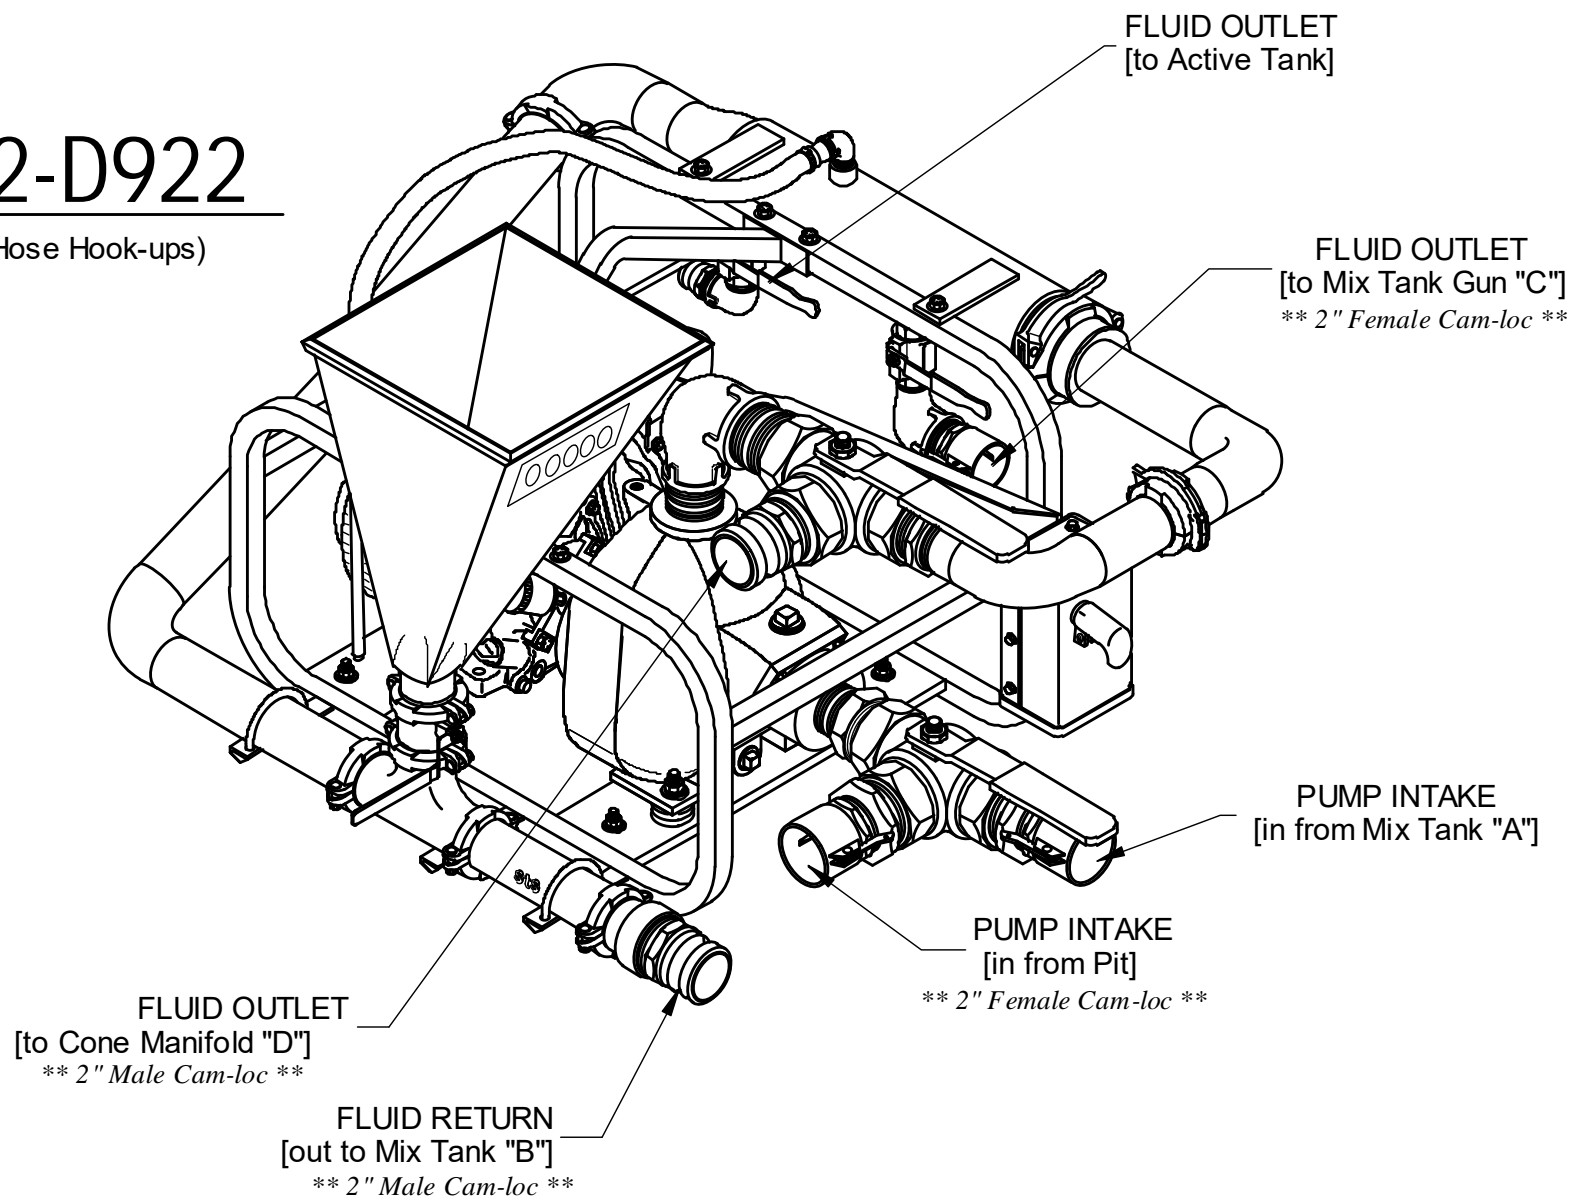

"ALL HOSES SHOULD BE KEPT TO THE SHORTEST LENGHT POSSIBLE TO ACHIEVE MAXIMUN PREFORMANCE."



M2-D922

Operators Manual

Congratulations on your acquisition of the world renowned M2-922 Mixing System. You have acquired the fastest and most efficient mixing system manufactured for mixing Bentonite drilling slurry (mud). As a manufacturer of HDD support equipment, we are well aware of the extreme conditions that HDD equipment is exposed to on a daily basis. Surface To Surface Inc. strives to overcome these conditions, with better design and manufacturing practices. Please feel free to call our toll free number (1-800-567-0978) if you have any questions or concerns about your M2-922.

Thank you, for choosing the M2-922 series mixer.

The M2-922 mixing unit was designed to mix dry or liquid drilling products with clean water, into a slurry. The slurry is continually circulated through the mixing cycle until it reaches the desired consistency. The operator can then transfer the final product to a holding reservoir or directly to the drilling equipment.



The M2-922 can also be combined with the STS fluid cleaning and recovery unit, to mix drilling fluid, and to clean spent drill fluid and recover usable liquid from the solids.

The M2-922 mixing unit consists of an diesel powered centrifugal pump, filter/shear unit, venturi mixing tee assembly, dry hopper with a table, a set of tank internal jets (customer installed) and a set of 3-way valves to allow quick connection / setup to the STS fluid cleaning and recovery unit.

These components are all mounted on a frame type skid, built for lifting or solid mounting. For ease of interpretation, looking at the mixing unit hopper straight on will be considered looking at the front of the unit. Hence the other long side, will be the rear and the ends will be right or left end.


RECORD OF OWNERSHIP:

- Unit Serial No. _____
- Engine Serial No. _____
- Pump Serial No: _____
- Date Purchased/Leased: _____
- Dealer Purchased/Leased From: _____
- Special Custom Features: _____

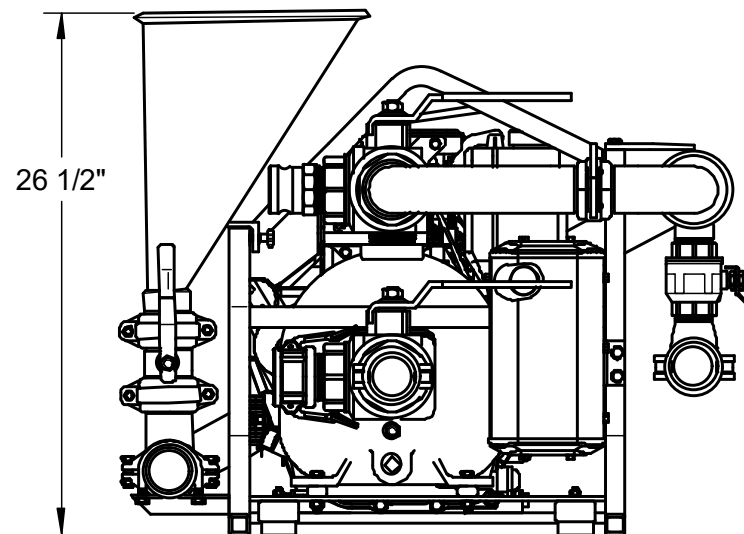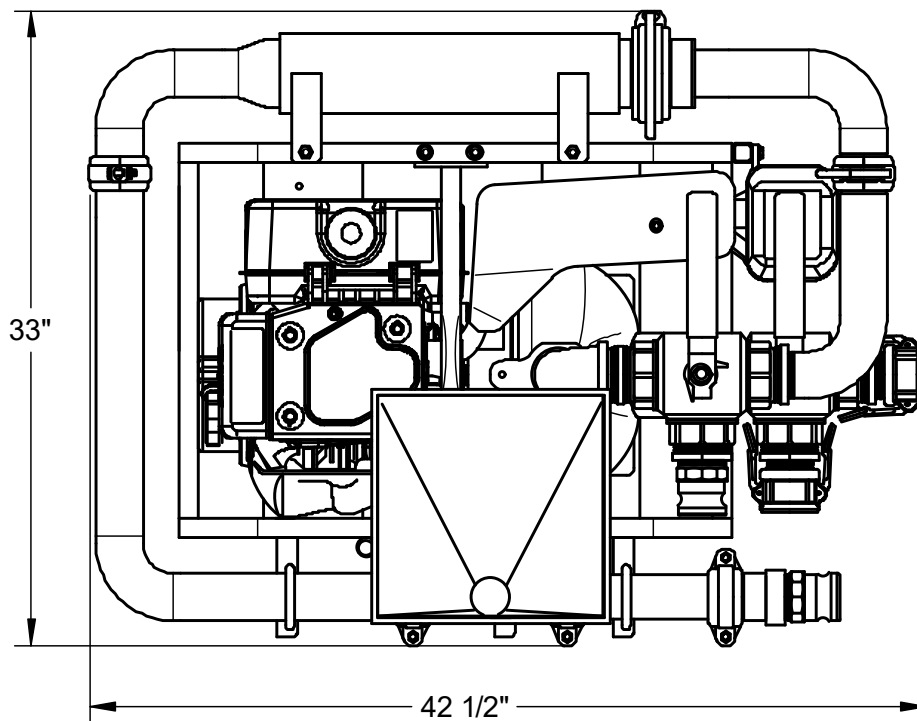

M2-D922 (Diesel)
 Dry Weight: 400 Lbs (182 Kg)

** Due to our continuing product improvement, specifications are subject to change without notice. **

	
DWR. NUM.	DATE. 04 / 17 / 13
M2-D922	REV.





Universal 2" Mixer Model M2-D922

Surface to Surface Inc.



Features and Benefits M2-D922 Mixer

The M2-D922 universal mixer is designed around the time proven M series mixers of STS. Powered by a 9 hp air-cooled diesel engine, driving a 2" centrifugal pump, making effective use of the proprietary 4 point mixing system. The M2-D922 has a set of 3-way valves mounted to the suction & discharge ports of the pump that allow the operator to choose between two different inlet sources, and a different outlet. The M2-D922 was designed for use with STS fluid recovery systems, but may also be used as a new installation or retrofitted into an existing system of tank(s). Since the unit is connected by hoses and not hard pipe, the placement of the mixer verses the tank(s) is less restricted and a configuration to suit the needs of the contractor is easier to achieve. The small size also makes it a portable, independent unit that is easier to transport from site to site.

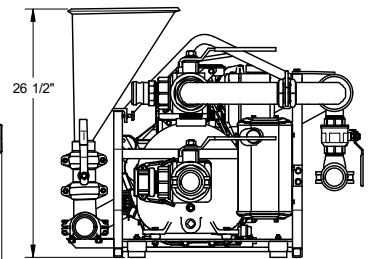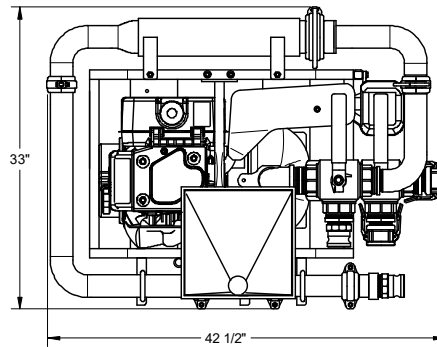

Specifications

Dimensions
Weight
Hopper Height & Size
Mixing System
Flow Valves
Skid Frame
Engine
Pump
Pump / Engine Connection
Pipe Couplers
Pressure Wand
Internal Jet Guns (supplied)
Mechanical Seal
Replaceable Wear Plate
3-way Valves

M2-D922 Mixer

33" W x 43" L x 26 1/2" H
400 lbs. (182 Kg)
26 1/2" High Holds 1/2 of a bag
2" Proprietary StS Mixing System
Brass and Steel construction
1" steel tube with lifting bale
9.0 hp air-cooled, man/ elect start
2" Cast iron centrifugal trash pump
Direct coupled engine & pump
Bolt & Snap-groove type
Hopper maintenance wand
Eductor Nozzles (5-1 fluid output)
Self-Pressurizing Grease Seal
Hardened plate ahead of Impeller
2 1/2" NPT Port, 2 position

Benefits

Small space saving footprint.
Light weight for easy transportation.
Low hopper height reduces back strain.
Fast & efficient with high shearing ability.
Withstand the abuse of daily operations
Built tough for the construction trade.
Industrial rated for longer service life
Gorman-Rupp 80 series
No expensive couplers or inserts to replace.
Fast cold weather draining of system.
Removal of build-up caused by additive.
Fast and effective rolling and mixing action.
Greaseable seal for more rugged working conditions
Less wear on internal pump parts and is replaceable.
Designed for heavy duty slurry use. Large handles.

With a 40 second viscosity, the M2 produces 90 gpm @ 36psi through the nozzle and 52 gpm @ 36psi to the tank internal jet guns (5-1 mixing equals 260 gpm of mixing / rolling action in tank) and a discharge rate of 80 gpm @ 36psi

Also available in Hydraulic (M2-H922), Electric (M2-E922) or Gasoline (M2-G922) models.

*** All Specifications Subject to Change Without Notice ***

Check our website for the latest products and specifications
www.stsmixers.com


Surface to Surface Inc.

5150 Forest Road, R.R.#3, Watford, Ontario, N0M 2S0
Tel: 1-800-567-0978


04/18/13

Identifying Your Machine & Components

Location of Tags and PIN Plates

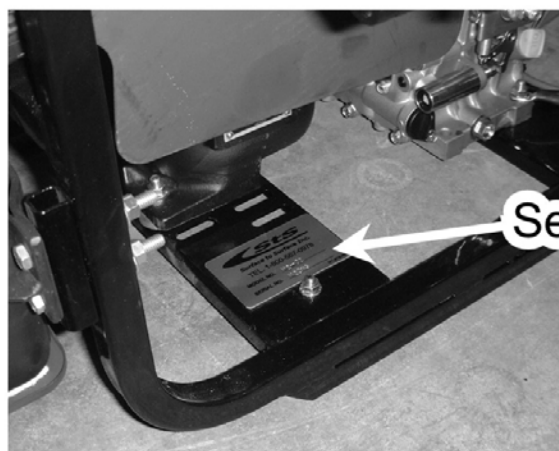

Unit
Serial Number

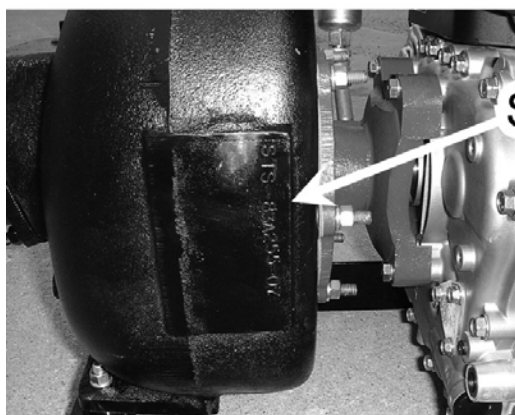

Pump
Serial Number



Engine
Serial Number

SECTION #II

Description, Care and Maintenance



M2-D922

Description, Care and Maintenance

Diesel Powered Centrifugal Pump

Care and maintenance of the engine and pump are covered in this manual and/or the manufacturer operator's manuals supplied and should be read and understood. We suggest the following daily checks be carried out prior to using the system. Check the diesel tank is full. Check oil level by removing the oil plug / dip stick, and viewing the oil level. Check the pump seal grease cup is full (see grease cup instructions Fig.5). Check the engine air filter (due to environmental conditions). Check that any water intake valve(s) are open and the reservoir tank has sufficient liquid to supply the centrifugal pump.

The pump is mounted directly to the engine, so there is no "drive coupler" to check or maintain. The pump is the primary component that will see the most wear due to the nature of the material it is handling therefore it will require regular checks, adjustments and maintenance.

There is a section of this manual dedicated to the pump itself and should be read and understood which will help should any problems or concerns arise in the field.

The pump should never be allowed to start or run dry, as this WILL damage the internal pump seal (grease seal) and render the unit inoperable until the seal is fixed.

To prime the pump or check to visually see if the pump is primed, slowly undo the priming plug (see fig. 3) on top of the pump and stop after about 3 turns. If the pump is primed, fluid & air will escape from around the plug threads. This indicates that the pump housing is full, and the plug can be tightened back up. If no fluid is escaping from around the threads, completely & carefully remove the plug. Drill fluid or water can be poured into this opening to fill the pump cavity, and a visual of the fluid level inside the pump can be made. The level should be approximately to the top of the pump priming hole.

Another way to prime the pump is to have the tank FULL of fluid, and standing off to the side of the hopper, rotate the hopper valve SLOWLY to the open position. As the valve is opened, you will hear air escaping followed by fluid, into the hopper itself. Close the valve as the fluid enters the hopper. This means the fluid in the tank has filled the pump cavity of the pump and flowed from the outlet of the pump to the remaining piping on the unit.

DANGER

IN AN EMERGENCY
rotate the engine speed control lever
to the STOP position
to halt engine, pump, and fluid flow

DANGER

**NEVER ATTEMPT REPAIRS
OR DISASSEMBLY**

without shutting off the engine.
Serious personal injury will result.

Fig.3



CAUTION

**BEFORE STARTING THE ENGINE,
BE SURE THE PUMP IS PRIMED!**

Check the pump by slowly & carefully
opening the priming plug located on
the centrifugal pump.

A visual inspection can be made if the fluid
escapes around the plug as it is loosened.
Remove the plug to view inside fluid level.

The centrifugal pump seal **WILL** be
damaged if allowed to cavitate or run dry.

CAUTION


**IMPROPER INSTALLATION OF THE
MECHANICAL or GREASE SEAL**
will result in leakage and possible
damage to the seal. All maintenance,
operating and repair of this unit, must be
done per the instructions in the operators
manual for safety and reliability.

M2-D922

Description, Care and Maintenance

Diesel Powered Centrifugal Pump

Fig.4

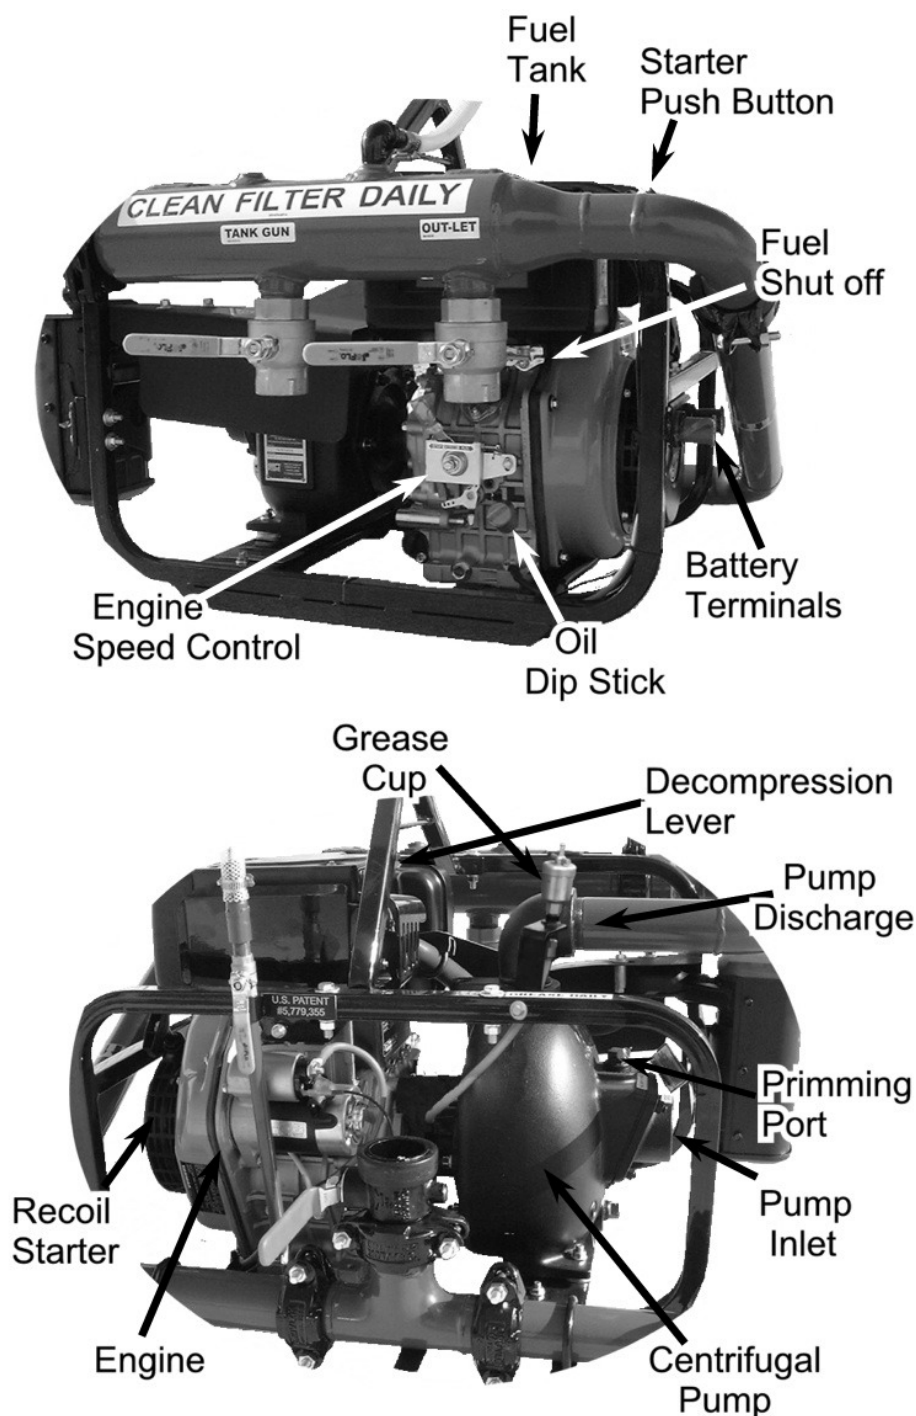

CAUTION


TRAPPED FLUID MAY BE PRESENT and will spill out when piping, hoses, pump or filter shear are removed.

CAUTION

NEVER LEAVE LIQUID IN THE PUMP CASING, PIPING, OR HOSES during freezing weather conditions, as damage will result. Follow instruction for winterizing.

CAUTION

BEFORE STARTING OR RESTARTING the engine and centrifugal pump, make sure any valves installed on the pump suction inlet line are open, and the fluid level in the tank is above the suction line.

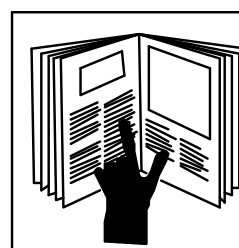

WARNING

REFER TO THE SAFETY STATEMENTS IN THE OEM SUPPLIED MANUALS AND THIS MANUAL REGARDING THESE OPERATIONS.

Description, Care and Maintenance

Diesel Powered Centrifugal Pump

Grease cup instructions (Fig.5)

Fill the grease cup through the grease fitting with No. 2 lithium base grease until grease escapes from the relief hole. Turn the grease cup arm counterclockwise until it is at the top of the stem; this will release the spring to apply grease to the seal.

NOTE:

Some smoking and leakage may occur after installing a new seal assembly. This should stop after the pump has run a while and the lapped seal faces have seated in.

Fig.5

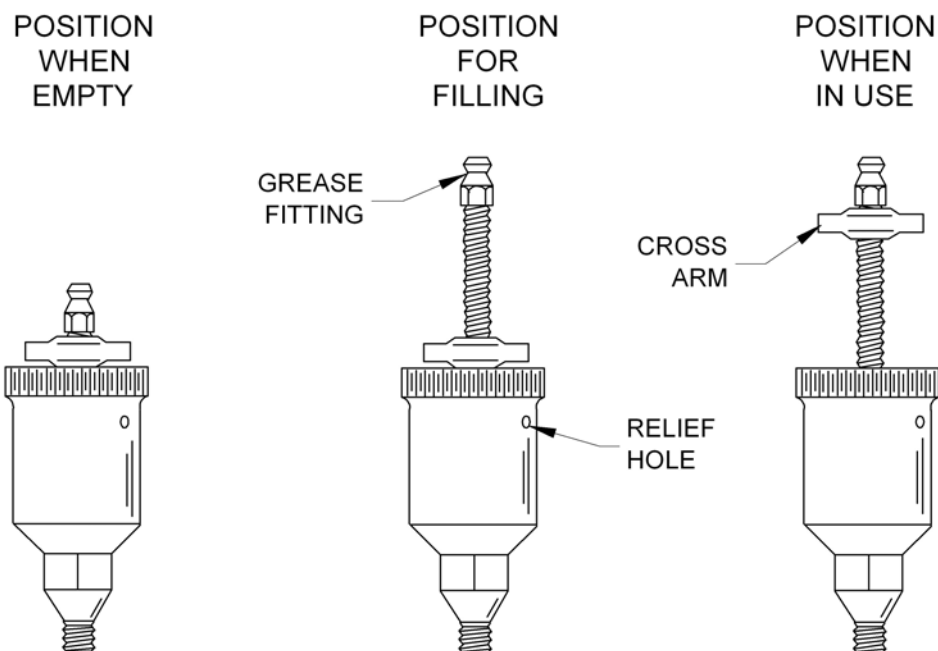


Figure 4. Automatic Lubricating Grease Cup

Description, Care and Maintenance

Diesel Powered Centrifugal Pump

Grease cup instructions (Fig.5a)

GREASE CUP NEEDS TO BE CLEANED REGULARLY

The grease cup may not perform its function properly (lubricating the seal) if it is not routinely cleaned of old hard grease build-up.

If the grease cup is always “topped up” instead of allowed to run to the full stroke of the plunger, the grease may dry out and build up inside of the cup and not allow the plunger to push to the full stroke. This in turn will stop the supply of grease to the seal causing premature seal failure.

As a precaution it is strongly recommended that every 30 days, the grease cup (or the top of the grease cup) be removed and the inside of the cup and the plunger be cleaned of all old grease.

Reassemble the plunger into the cup and check that the plunger slides to the bottom of the now clean cup.

Fill with fresh grease.

FIG #5a Shows clean grease cup & plunger and old, dried grease taken out of the cup, that was causing the plunger to “hang-up”.

Fig. 5a



M2-D922

Description, Care and Maintenance

3-way Valves

The M2-922 unit has 2 large 3-way valves (Fig. 6) mounted on the suction and discharge ports of the 2" pump. These valves are utilized when the M2-922 mixing unit is used in conjunction with a STS fluid cleaning and recovery unit.

When the valve handles are fully rotated clockwise against the stop (Fig. 6a), the M2-922 unit is in standard mixing mode.

When the valve handles are fully rotated counter clockwise against the stop (Fig. 6b), the M2-922 unit is in the cleaning /treating mode, which is described in detail in the STS fluid cleaning and recovery unit operators manual and briefly in this manual in section IV.


Visual inspection, rotating the handles from stop to stop, and flushing with clear water are the only regular maintenance required.

NOTE: *The hose (port) that the handle is over top of, is CLOSED and has no flow through it.*


Fig.6



**Valve Handles shown in the
Mixing Position**

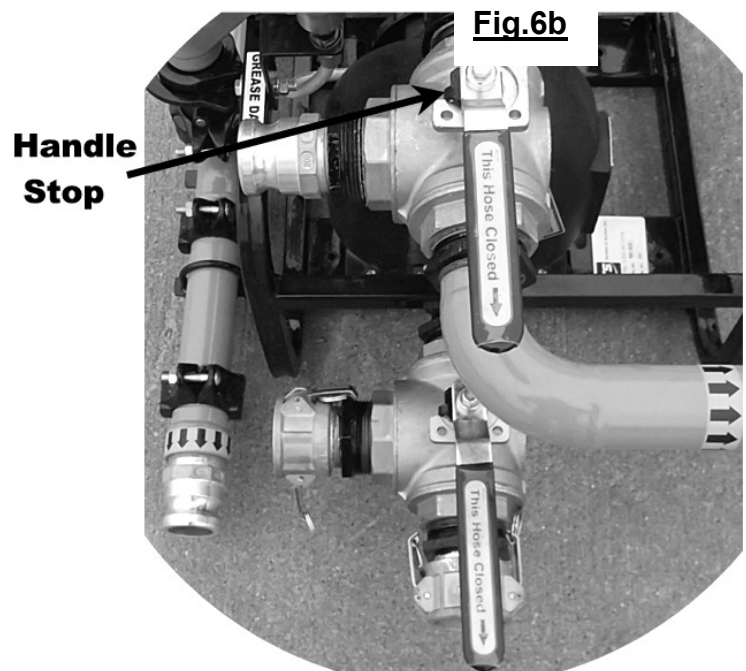

**Valve Handles shown in the
Cleaning/Treating Position**

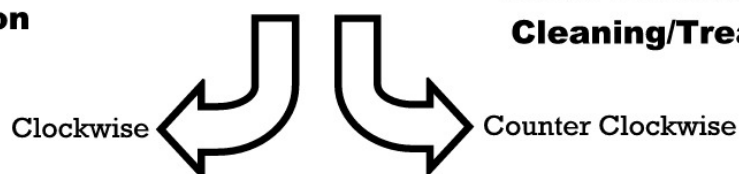

Description, Care and Maintenance

Filter / Shear System


The filter / shear (Fig.7a) system on the M2-922 is an integral part of the mixing system and to operate efficiently requires daily cleaning of the stainless steel internal filter /shear. The filter / shear system is a two-piece unit (Fig.7b) consisting of an outside housing and an internal filter / shear. The filter / shear will trap any debris, such as parts of bags, stones, leaves grass etc. The proper procedure for cleaning the filter / shear is to close the suction valve from the reservoir tank to the pump, rotate the two “Outlet” valves to the closed position, remove the 3 inch Snap Loc coupler at the right end of the filter housing, remove the 2 inch Snap Loc coupler on the discharge pipe of the centrifugal pump. You will now be able to remove the internal filter / shear from the housing. After the internal filter / shear has been removed, you will see on the end of the filter / shear a pipe plug (Fig.7b). Remove the pipe plug and wash out the filter / shear with clear water. Reinstall the pipe plug into the filter / shear, reinstall the filter / shear in the housing. **Do-not** clamp the 3 inch coupler until the 2 inch coupler and gasket are properly lined up. After all pieces are correctly lined up, clamp the 3 inch coupler 1st and 2 inch coupler 2nd and reinstall the safety pins. Open all of the valves that were closed prior to removing the filter / shear.

Fig.7a



⚠ DANGER
**NEVER ATTEMPT REPAIRS
OR DISASSEMBLY**
without shutting off the engine.
Serious personal injury will result.

Fig.7b

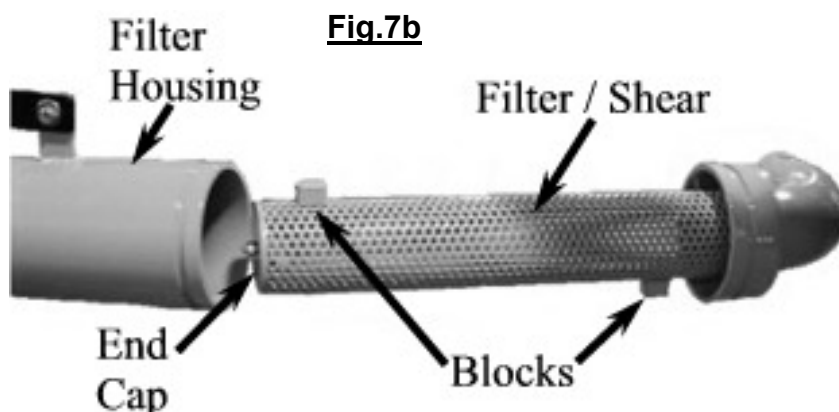

⚠ WARNING
**NEVER ATTEMPT TO REMOVE
OR CLEAN THE FILTER SHEAR**
while the unit is in operation.
Serious personal injury will result.

CAUTION
**CARE MUST BE TAKEN WHEN
INSTALLING THE COUPLER GASKETS.**
If the gaskets are not properly lubricated
and installed, a leak may develop.

Description, Care and Maintenance

Filter / Shear System *continued*

On the bottom of the filter / shear housing (Fig.8) are two outlets that have 1 1/2" NPT ball valves connected to them. One of the outlets is to be connected to the internal tank jets inside of the reservoir tank (explained further on in this manual) and the other outlet is to be used as a discharge for the fluid after it is mixed. The discharge can be connected to another reservoir tank or directly to the drill rig. To control the flow of discharge, the ball valve can be used to regulate the flow. The speed of the engine can also be used to control the flow and pressure of the discharge. It is up to the customer to decide the piping arrangement and how they would use the discharge options. The discharge flow can have high pressure and high volume flows associated with it, and should be treated as such. If you are unsure of the installation and routing of this flow, contact Surface to Surface Inc. for more details.

Also on top of the housing is the outlet for the wash wand. The wash wand is explained in more detail further on in this manual.

Fig.8



CAUTION

WHEN TRANSFERRING FLUID to the drill rig, fluid pressure may reach or exceed 50 p.s.i.
CHECK the drill rig manufacturers specifications regarding maximum inlet pressures allowed for their pump.

CAUTION


TRAPPED FLUID MAY BE PRESENT and will spill out when piping, hoses, pump or filter shear are removed.

Description, Care and Maintenance

Venturi Mixing Tee

The Venturi Mixing Tee (Fig. 9a.) is the very heart of this system and requires very little maintenance. However M2-922 parts may wear as a result of the application, in time and require replacement. This wear will become evident, when the operator notices a reduction in the vacuum that helps pull in the dry product from the hopper. When mixing dry product, over time, you will see an accumulation of damp product inside of the mixing tee around the nozzle. If this accumulation is left unattended, over time it will build to the point of restricting the inlet of the mixing chamber. This situation is easily rendered, by using the wash wand to “flush out the accumulation, and force it back into the fluid stream.

Fig.9a

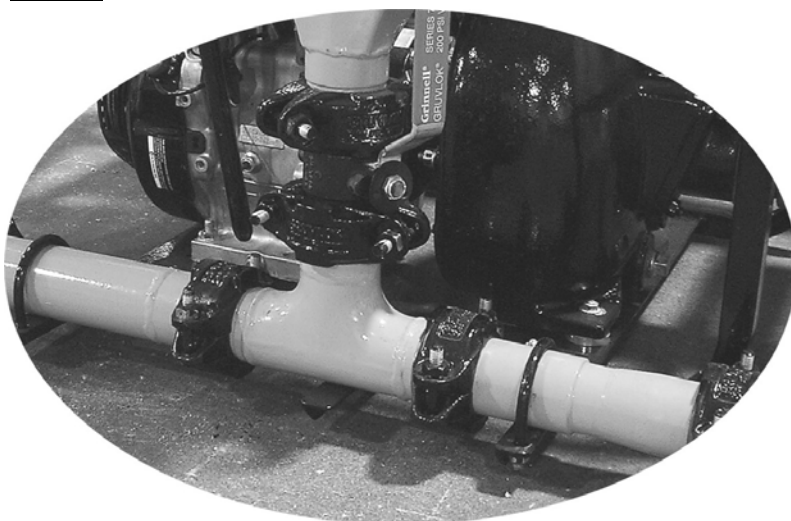


CAUTION

AVOID ALLOWING FOREIGN MATERIAL
into the Venturi Mixing Tee thru the
Hopper, by keeping the valve closed
when not in use.

Fig.9b

⚠ WARNING

**NEVER USE BODY PARTS,
OR FOREIGN OBJECTS**
in an attempt to unplug or clean the
hopper valve or mixing tee.
Serious personal injury or
damage will result.

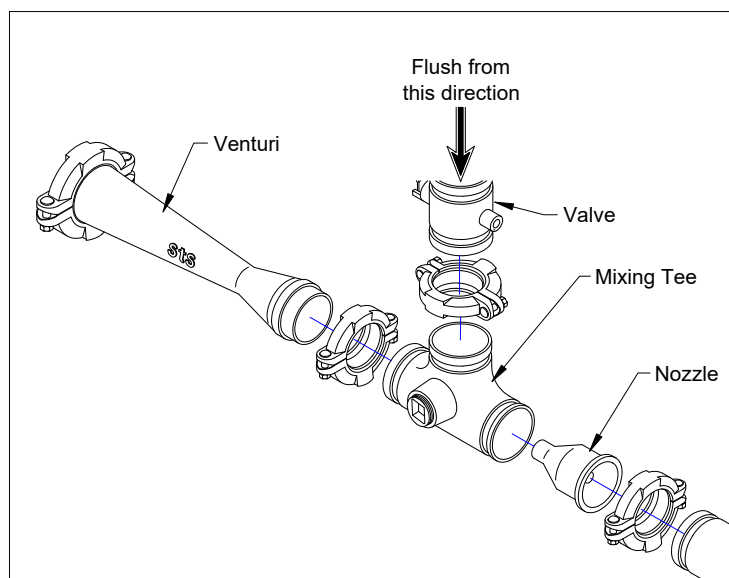

M2-D922

Description, Care and Maintenance

Wash Wand

The M2-922 unit is equipped with a pressurized wash wand (Fig.10a) for clearing obstructions and accumulation in the jetting tee. It is recommended that the jetting tee be cleaned with the wash wand after the introduction of material into the hopper after each batch.


The wash wand uses the high-pressure fluid from the mixing system piping which can reach pressures of up to 50psi. **CAUTION** should always be used when handling the wash wand. A valve is located on the wash wand to regulate the flow of fluid.

The wash wand is not to be used as a poker or pry bar, but instead use the fluid from it to “wash” away accumulations. Be careful when putting the wash wand inside the mixing chamber that it does not block the fluid stream coming out of the nozzle, as it will spray back up the hopper and towards the operator.

The wash wand can also be used to get a fluid sample for testing purposes. An example of this (Fig.10b) is to check the viscosity of the fluid using a marsh funnel. Simply put the wash wand inside the hopper (with the hopper valve open) and slowly open the small valve located on the wash wand. Rotate the valve handle to the on position, and let it flow for approx. 15 seconds, close the valve and place the wash wand in the screening area of the marsh funnel. Slowly fill the marsh funnel to the proper volume, close the valve on the wand, and store back on the small hose holder rack. Follow the instructions of the marsh funnel for the rest of the test.

The sample of fluid taken from the wash wand is the same as the fluid going out of the discharge of the filter / shear housing to the drill rig or reservoir tank.

Fig.10a

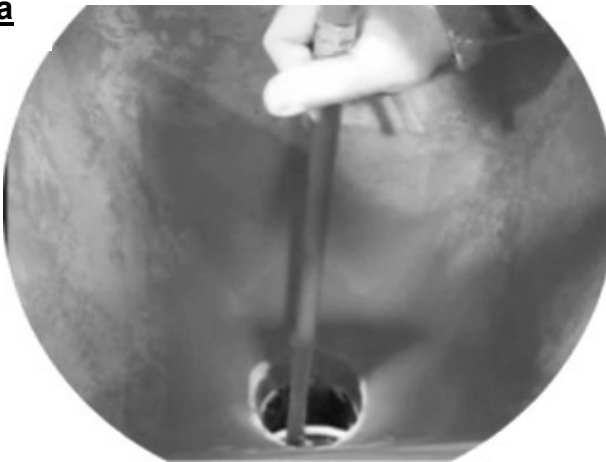

! CAUTION

**DO NOT POSITION
ANY PART OF YOUR BODY**
over the hopper, valve,
or mixing tee while cleaning.

! CAUTION

**WHEN THE UNIT
IS IN OPERATION,**
the fluid in the piping may reach
pressures up to 50 p.s.i.
When the engine is idling, the system is
still pumping fluid under pressure.

! WARNING

**NEVER USE BODY PARTS,
OR FOREIGN OBJECTS**
in an attempt to unplug or clean the
hopper valve or mixing tee.
Serious personal injury or
damage will result.

Fig.10b




Description, Care and Maintenance

Dry Hopper with Table and Hopper Valve

The Dry Hopper (Fig.11) is used during the initial mixing of the dry product and fluid. The hopper requires very little daily maintenance. Keeping the inside surface of the hopper clean will help the dry product flow smoothly into the hopper valve and into the mixing tee. The hopper is not ladders and should not be climbed on or sat upon as damage can result. The hopper can be removed with relative ease if needed for transporting size restraints. The securing knob at the rear side of the hopper should be checked regularly and kept tight to prevent movement.

The hopper valve must be kept free of dried Bentonite, ice or other buildups to reduce the chance of damage during opening and closing. The valve operates more smoothly if the surfaces are kept damp or wet. All valves are to be opened and closed by hand. **DO NOT FORCE THE VALVE OPEN OR CLOSED,** visually check the valve if a problem occurs!

Fig.11

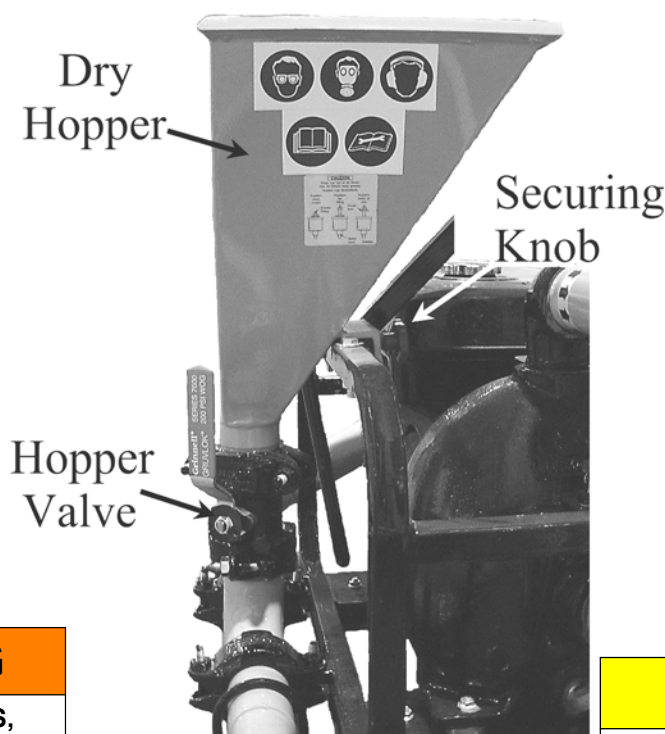

⚠ WARNING

NEVER USE BODY PARTS, OR FOREIGN OBJECTS in an attempt to unplug or clean the hopper valve or mixing tee. Serious personal injury or damage will result.

⚠ CAUTION

DO NOT POSITION ANY PART OF YOUR BODY over the hopper, valve, or mixing tee while cleaning.

CAUTION

AVOID ALLOWING FOREIGN MATERIAL into the Venturi Mixing Tee thru the Hopper, by keeping the valve closed when not in use.

Description, Care and Maintenance

Internal Tank Jets

The Internal Tank Jets (Fig.12a) are supplied with the M2-922 unit, and are installed (by the customer) inside the reservoir tank, to keep the slurry product in the tank moving. This function assures the elimination of dead spots in the tank and a consistent mixture of fluid.

The internal tank jets are connected together in series, usually by a manifold design, (suggested by STS) where all jets receive the same amount of fluid and pressure. This manifold design is supplied with fluid from one of the outlets on the discharge manifold (Fig.12b). The manifold has a ball valve to control the flow, and should always be in the open position, unless you are cleaning the filter / shear (described earlier) or performing repairs on the system. If the valve is not closed, when performing these tasks, a siphoning action can occur, pulling fluid from the tank and into the external piping. The internal tank jets require little or no maintenance and will only require attention if they become clogged. Flushing the entire system daily with clear water should eliminate any problems with this piece of the system. The fluid passing through the internal tank jets is at a very high pressure and extreme caution should be used when viewing the inside of the tank.

The internal tank jets also act as a relief valve to the system and relieve the pressure spikes caused when the flow to the drill rig or second reservoir tank is interrupted.

Fig.12a



⚠ DANGER

**NEVER ATTEMPT REPAIRS
OR DISASSEMBLY**

without shutting off the engine.
Serious personal injury will result.

CAUTION

ENTERING THE TANK is not recommended
Personal injury could result from
the presence of hazardous fumes,
remaining fluid or unit start-up.

Fig.12b



⚠ CAUTION

**NEVER OPERATE THE MIXING
unit with the tank lid open.**

⚠ CAUTION

**WHEN THE UNIT
IS IN OPERATION,**
the fluid in the piping may reach
pressures up to 50 p.s.i.
When the engine is idling, the system is
still pumping fluid under pressure.



Description, Care and Maintenance

Internal Tank Jets - Installation


How they work.

For every gallon of fluid passing through the jet nozzle from the manifold pipe, the jet nozzle will draw in another 4-5 gallon more from around the outside of the nozzle, creating a larger volume of fluid movement in the tank.

Connect the manifold to the outlet on the filter/shear of the STS Mixing Unit. Each unit is shipped with 2-4 jet nozzles that have been properly sized for the unit.

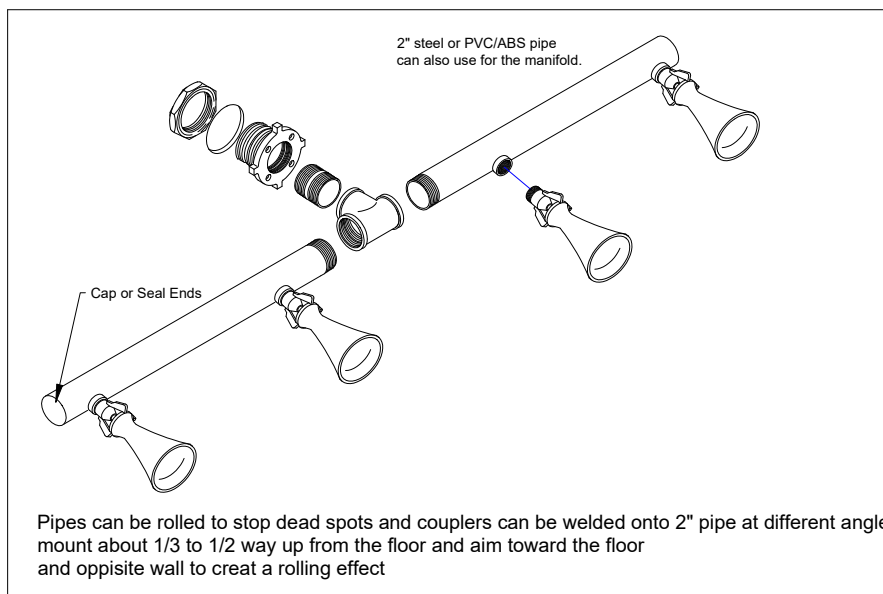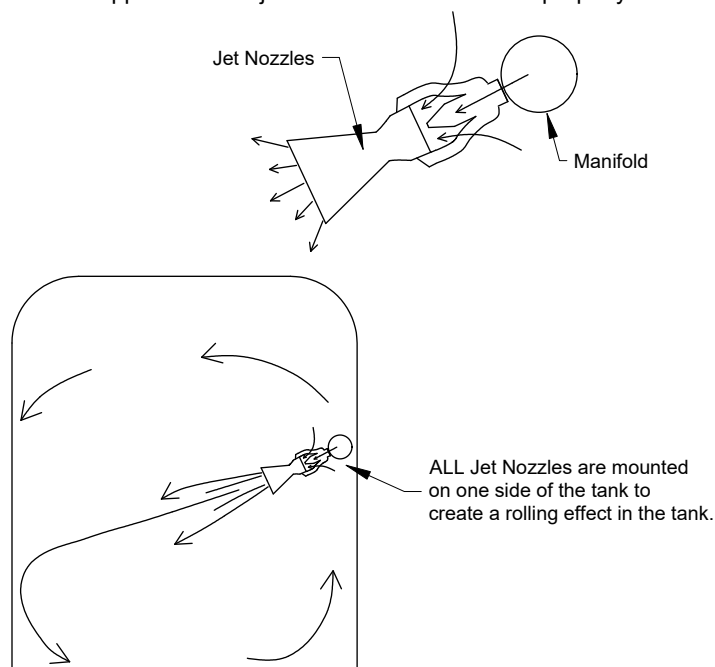

Typical horizontal installation in a tank

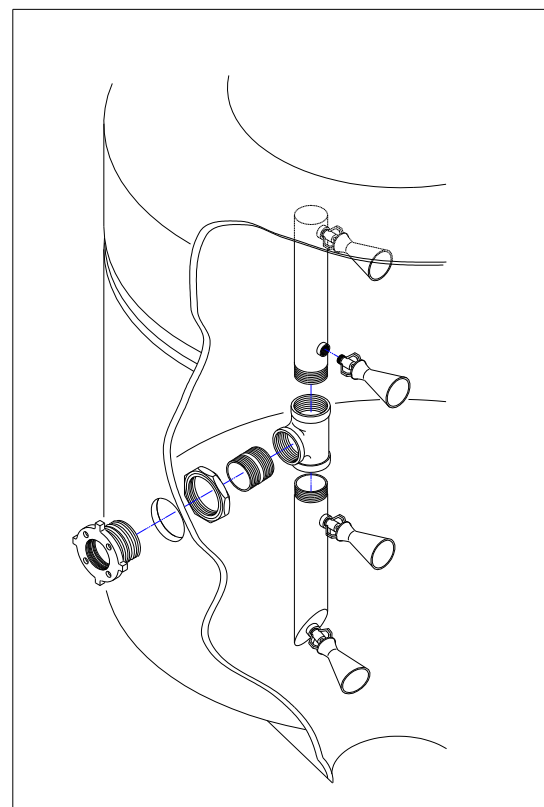

Typical vertical installation in a round cone bottom tank

For help with design and placement in your tank, call Surface to Surface Inc. and they will work with you to find the best solution

SECTION #III

Set-up and Installation of Unit in Detail

M2-D922

Set-up and Installation of M2-922 in detail

Permanent mounting of the unit

The M2-922 is built on a sub frame with isolators (pucks) attached to the bottom. The unit can be fastened down to a permanent surface like a concrete pad, pull type trailer, flat deck of a truck or inside of a truck body. Securing the unit with adequate size and grade of fasteners is the sole responsibility of the customer and not of Surface to Surface Inc.

When fastening down the unit, care should be used when drilling holes to avoid such unseen items, as gussets, cross-members, wiring or other fixtures below the surface.


Adequate space or an opening will also have to be considered when mounting, for the removal of the filter / shear cartridge for regular cleaning and inspection.

Be aware of the engine exhaust and how it will impact on the placement of the unit. If the unit is to be mounted in an enclosed area the exhaust will have to be vented outside where it will not effect the health of the operator or others working near the unit.

Portable use of the unit


If the M2-922 is to be used as a portable unit, there is a lifting bale (Fig.13) connected to the sub frame to support and balance the unit when lifting or moving. Properly approved and rated lifting apparatus should be used at all times and lifting done by qualified personal only.

The M2-922 should only be placed on solid, level ground with a clear working area around it.

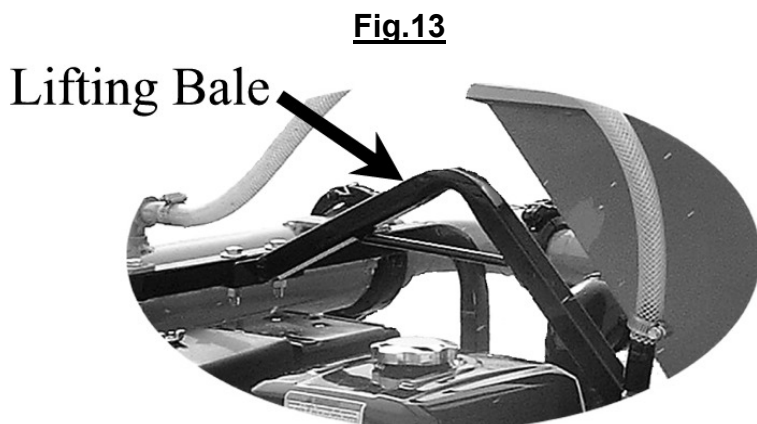

CAUTION

LIFTING LUGS OR THE LIFTING POINT(S) identified and labelled on the skid structure must be used in order to safely lift and transport the unit.

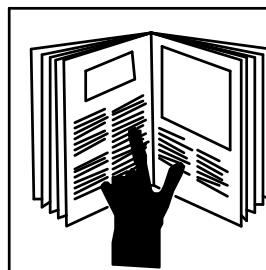

WARNING

REFER TO THE SAFETY STATEMENTS IN THE OEM SUPPLIED MANUALS AND THIS MANUAL REGARDING THESE OPERATIONS.

SECTION #IV

Operating the M2-922 Unit



M2-D922

Operating the M2-922 Unit

Site Setup & Pre-Check

SITE SETUP

- **CHECK** for overhead hazards if unloading the unit to the ground.
- **UNLOAD** the unit by using the sub frame lifting bale (marked) with appropriate equipment.
- **SET** and position the unit on solid level surface to avoid settling or upset.
- **SET** and position the unit to have a clear unobstructed working area of 10ft (3m) on all 4 sides.
- **CONNECT** and secure all hoses onto the unit according to your layout.
- **SECURE** the truck and/or the trailer that the unit is mounted on, from movement.
- **PROTECT** any hose(s) that connect between the M2-922 and the drill rig, from possible damage or from being driven upon by a vehicle.

UNIT PRE-CHECK

- **READ** engine operators manual for proper starting and running procedures.
- **CHECK** to ensure the engine oil level is correct. Refer to the engine operator manual supplied.
- **CHECK** to ensure the air filter is clean (replace if necessary). Refer to the engine operator manual supplied.
- **CHECK** to ensure the fuel tank is full and the shut off valve is open. Refer to the engine operator manual supplied.
- **CHECK** to ensure the grease cup on the pump is full of grease and the winged/lugged nut on the top, is backed off to allow the shaft to retract into the grease cup.
- **CHECK** to ensure any valves installed on the suction intake line between the tank and centrifugal pump are open.
- **CHECK** to ensure there is sufficient fluid in the tank, to insure the centrifugal pump does not run dry.
- **CHECK** to ensure the centrifugal pump is primed.
- **CHECK** to ensure the ball valve on the filter housing connected to the “tank jets” is open.
- **CHECK** to ensure the ball valve on the filter housing connected to the drill rig is closed.
- **CHECK** to ensure the small ball valve on the Wash Wand is closed.
- **CHECK** that the hopper valve is closed.

M2-D922

Operating the M2-922 Unit

Starting the Engine & Pump

***** The Engine Operators Manual should be consulted for a more detailed engine start up procedure for both recoil and electric start engines**

The M2-D922 mixer IS NOT EQUIPED WITH A BATTERY. 12volt post terminals are installed on the unit and a remote battery and connection can be made. Use proper wiring size.


Starting Engine (Electric Start / Remote Battery)

- Connect a remote battery to the 12 volt post terminals. (Fig.14a)
- RED Pos.+ to RED Pos.+ , BLACK Neg. - to BLACK Neg. -
- Slide the engine speed control to the “RUN” position. (Fig.14b)
- Hold the decompression lever over. Push and hold in the starter button to engage the starter. (Fig.14a)
- After the engine rolls over 2-3 times release the decompression lever.
- Release the button as soon as the engine starts.
- When the engine starts, the centrifugal pump will be pumping fluid under pressure.
- Gradually move the engine speed control lever toward the high-speed position and set at the required speed. *Note: Whenever high-speed operation is not required, slow the engine down by moving the engine speed control lever to save fuel and extend engine life.*
- If the engine fails to start:
 - (a) Wait until the engine comes to a complete stop before you attempt to start it again. Engaging the starter while the engine is still rotating will result in damage to the starter motor and flywheel.
 - (b) Wait at least 30 seconds before you attempt to start the engine again. This pause will allow the battery voltage to recover to prevent damage to the starter motor due to the low battery voltage

Fig.14a



Fig.14b

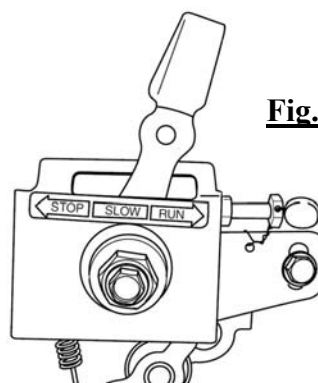

Note

The Yanmar / Gorman Rupp pump used on this unit is self-priming. Re-priming is not required as long as the pump is kept full of liquid and the hoses are not unhooked and / or drained.

	<div style="background-color: orange; color: black; padding: 5px; font-weight: bold; font-size: 1.2em;">⚠ WARNING</div> <p style="margin: 5px 0;">REFER TO THE SAFETY STATEMENTS IN THE OEM SUPPLIED MANUALS AND THIS MANUAL REGARDING THESE OPERATIONS.</p>
--	--

<div style="background-color: yellow; color: black; padding: 5px; font-weight: bold; font-size: 1.2em;">CAUTION</div>
<p style="margin: 0;">BEFORE STARTING THE ENGINE, BE SURE THE PUMP IS PRIMED!</p> <p style="margin: 0;">Check the pump by slowly & carefully opening the plug located on the top of the centrifugal pump discharge elbow. A visual inspection can be made if the fluid escapes around the plug as it is loosened. Remove the plug to view inside fluid level. The centrifugal pump seal WILL be damaged if allowed to cavitate or run dry.</p>

Operating the M2-922 Unit

Typical Mixing Operation

Mixing Operation: Dry Products

- With the tank full of water.
- Operate the engine at high speed.
- If not already open, open internal tank jet valve.
- Open the hopper valve at the bottom of hopper where it joins the venturi-mixing tee.
- Introduce the dry or liquid raw material into the hopper.

When mixing a new batch, introduce the 1st bag of dry product at a rate of 40 lbs per minute. Once the first 40 lbs. of dry product are in the fluid stream, all dry products may be introduced as fast as the hopper will allow. This allows time for the 1st bag to be mixed well into the fluid and will now aid to suspend all remaining dry product that is added, into the fluid in the tank to achieve a better shear and stop any build-up in the tank.

- Suction created by the venturi-mixing tee will draw the raw material into the jet stream for initial mixing.
- Flush jetting tee with wash wand.
- Close the butterfly valve on the hopper to keep debris out of the system.
- Allow the mixing system to circulate the product until the desired consistency is attained.
- A sample of the mixed fluid may be taken at from the wash wand as described earlier in this manual, on the wash wand description page.

Note: *Whenever high-speed operation is not required, slow the engine down by moving the engine speed control lever to save fuel and extend engine life.*

DANGER

IN AN EMERGENCY
rotate the engine speed control lever
to the STOP position
to halt engine, pump, and fluid flow

CAUTION


AVOID ALLOWING FOREIGN MATERIAL
into the Venturi Mixing Tee thru the
Hopper, by keeping the valve closed
when not in use.

WARNING

**NEVER USE BODY PARTS,
OR FOREIGN OBJECTS**
in an attempt to unplug or clean the
hopper valve or mixing tee.
Serious personal injury or
damage will result.

CAUTION

**DO NOT POSITION
ANY PART OF YOUR BODY**
over the hopper, valve,
or mixing tee while cleaning.

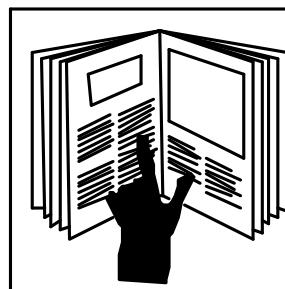

WARNING

REFER TO THE SAFETY
STATEMENTS IN THE
OEM SUPPLIED MANUALS
AND
THIS MANUAL
REGARDING THESE
OPERATIONS.

Operating the M2-922 Unit

Typical Mixing Operation

Mixing Operation: Dry Polymers

- With the tank full of water.
- Operate the engine at high speed.
- Open the hopper valve at the bottom of hopper where it joins the venturi mixing tee.
- Introduce the dry polymer into the hopper using the polymer injection tool (Fig.15a)
 - insert the large rubber end down into the throat of the hopper to create a tight seal.
 - use the hose to "suck" the polymers from the measuring container. **DO NOT** push the hose into the polymers but draw from the top until all of the polymers are gone. (Fig.15b)

By drawing the polymers from the top, you will be introducing the polymers into the fluid stream of the nozzle, at approximately the desired 2 lbs. per minute as suggested by the manufacture to achieve a better shear and reduce any build-up in the "mixing tank."

- Suction created by the venturi mixing tee will draw the polymers into the jet stream for initial mixing.
- Remove the polymer injection tool from the hopper.
- Flush jetting tee with wash wand.
- Close the butterfly valve on the hopper to keep debris out of the system.
- Allow the mixing system to circulate the product until the desired consistency is attained.
- A sample of the mixed fluid may be taken from the wash wand as described earlier in this manual, on the wash wand description page.

Fig.15a


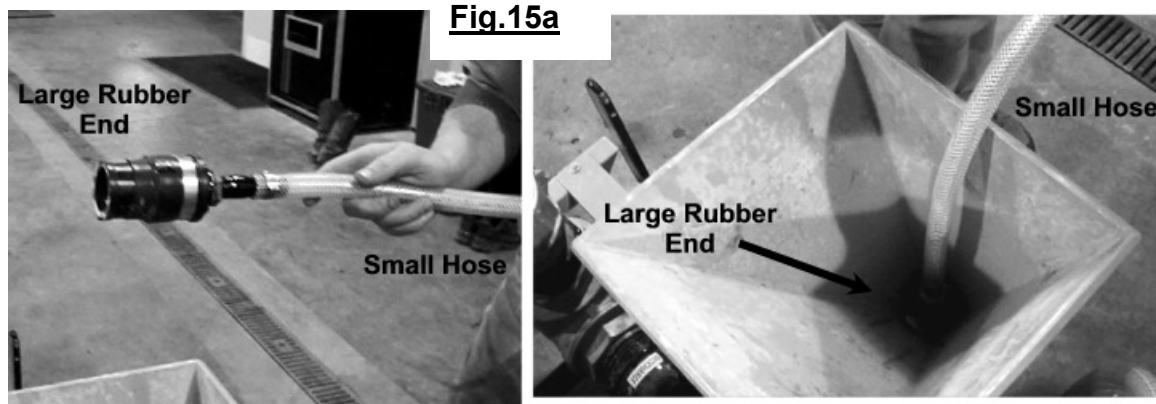


Fig.15b

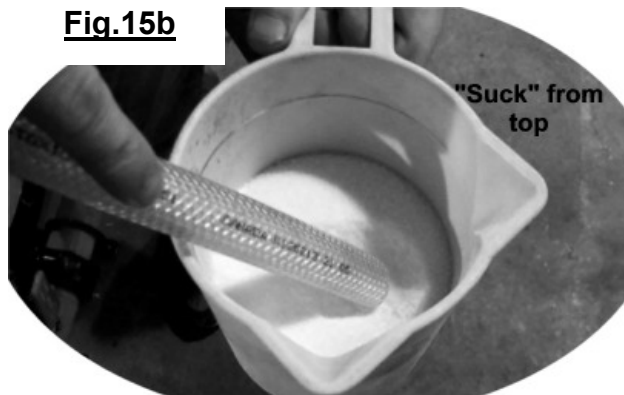

⚠ DANGER

IN AN EMERGENCY
rotate the engine speed control lever
to the STOP position
to halt engine, pump, and fluid flow

⚠ CAUTION

DO NOT POSITION
ANY PART OF YOUR BODY
over the hopper, valve,
or mixing tee while cleaning.

⚠ WARNING

NEVER USE BODY PARTS,
OR FOREIGN OBJECTS
in an attempt to unplug or clean the
hopper valve or mixing tee.
Serious personal injury or
damage will result.

CAUTION

AVOID ALLOWING FOREIGN MATERIAL
into the Venturi Mixing Tee thru the
Hopper, by keeping the valve closed
when not in use.




M2-D922

Operating the M2-922 Unit


Typical Transfer/Offloading Operation


Transferring Operation

- On the bottom of the filter / shear housing of the M2-922 you will see a second 1-1/2 in. ball valve (1-1/2"NPT.) marked "Outlet"(the first "outlet" is connected to the internal tank jets)
- A transfer hose with a minimum size of 1-1/2 in. can be attached to the ball valve to carry the finished product to a holding tank or directly to the drill rig.
- Make the necessary connections at the holding tank or the drill rig.
- With the M2-922 pump operating, open the ball valve **SLOWLY** to allow the flow to the holding tank or drill rig.
- The flow and pressure of the drilling fluid flow is determined by open-close position of the ball valve handle.
- If the unit is supplying the drilling rig directly, this valve is kept in the open position and a valve that is controlled by the operator of the drill rig, will be needed to stop the flow (normally mounted on the drill rig). The tank jet valve will need to be in the open position to act as a "relief" when the valve on the drill rig is closed.
- If transferring to a holding tank, the "outlet" valve on the filter/shear housing is used to start / stop the flow of fluid.
- When removing the mixed fluid from the tank (to the drill rig or reservoir), leave an amount of fluid in the bottom of the tank to keep the pump from sucking air (cavitation).
- Close this "Outlet" valve, add water to the tank and begin mixing a new batch of mixed fluid.

 DANGER
IN AN EMERGENCY rotate the engine speed control lever to the STOP position to halt engine, pump, and fluid flow

CAUTION
WHEN TRANSFERRING FLUID to the drill rig, fluid pressure may reach or exceed 50 p.s.i. CHECK the drill rig manufacturers specifications regarding maximum inlet pressures allowed for their pump.

 CAUTION
WHEN THE UNIT IS IN OPERATION, the fluid in the piping may reach pressures up to 50 p.s.i. When the engine is idling, the system is still pumping fluid under pressure.

	WARNING REFER TO THE SAFETY STATEMENTS IN THE OEM SUPPLIED MANUALS AND THIS MANUAL REGARDING THESE OPERATIONS.
--	--



M2-D922

Operating the M2-922 Unit

Typical Warm Weather Shutdown & Storage

Daily Shut Down

- Set the engine speed control lever (Fig. 13b) at the low speed position and allow the engine to run at low speed for 5 minutes.
- Slide the engine speed control lever to the STOP position. Do not stop engine suddenly while running at high speed.
- Close the fuel cock.
- Make sure the butterfly valve under the hopper is closed.
- Close any valve(s) installed on suction line between pump and reservoir.
- Remove the filter / shear as described in maintenance section.
- Clean filter / shear as described in maintenance section.

Additional Week End Shut Down

- Pump or drain remaining mixed fluid out of the tank and dispose of it according to local environmental approved practices.
- Make sure both “Outlet” valves are open.
- Disconnect the discharge hose that went to the drill rig or reservoir tank, at the drill rig or reservoir, and securely fasten it, back into the mixing tank to recirculate the fluid.
- Fill and rinse the tank with clear water and then start the engine and pump. By pumping this water through the entire system, it will remove buildup and dilute any remaining mixed fluid in the system.
- Open the valve on the wash wand and flush it back into the hopper. Open the hopper valve to drain.
- Stop the engine and pump.
- Drain the remaining water out of the tank and dispose of it according to local environmental approved practices.
- Remove centrifugal pump front drain plug. Replace the plug when the pump is empty.
- Make sure both “Outlet” valves and wash wand valve are open.
- Remove filter / shear and clean as described in the maintenance section of this manual.

**DANGER**


**NEVER ATTEMPT REPAIRS
OR DISASSEMBLY**
without shutting off the engine / motor
and disconnecting the power source.
Serious personal injury will result.


CAUTION

CARE MUST BE TAKEN WHEN
INSTALLING THE COUPLER GASKETS.
If the gaskets are not properly lubricated
and installed, a leak may develop.

CAUTION

TRAPPED FLUID MAY BE PRESENT
and will spill out when piping, hoses,
pump or filter shear are removed.

**WARNING**

**REFER TO THE SAFETY
STATEMENTS IN THE
OEM SUPPLIED MANUALS
AND
THIS MANUAL
REGARDING THESE
OPERATIONS.**

Operating the M2-922 Unit

Typical Cold Weather Shutdown & Storage

Additional Winter and Freezing Weather Shut Down


- Pump or drain remaining mixed fluid out of the tank and dispose of it according to local environmental approved practices.
- Make sure both “Outlet” valves are open.
- Fill and rinse the tank with clear water and then start the motor and pump. By pumping this water through the system, it will remove buildup and dilute any remaining mixed fluid in the system. Open the valve on the wash wand to flush it into the hopper, then close.
- Stop the engine and pump.
- Drain the remaining water out of the tank and dispose of it according to local environmental approved practices.
- Disconnect all hoses and let them drain.
- Remove centrifugal pump front drain plug. Leave the pump plug out.
- Make sure both “Outlet” valves and wash wand valve are open.
- Remove filter / shear and clean as described in the maintenance section of this manual. Leave filter / shear out of housing as this will allow remaining moisture to drain.
- Open the hopper valve and pour in a suitable environmentally friendly anti-freeze until it runs out of the venturi open end (hose is disconnected).
- Shut the hopper valve and pour a suitable environmentally friendly anti-freeze into the hopper until about 2” of fluid cover the valve. This will stop the valve from freezing around the edges.
-

CAUTION

NEVER LEAVE LIQUID IN THE PUMP CASING, PIPING, OR HOSES during freezing weather conditions, as damage will result. Follow instruction for winterizing.

CAUTION

CARE MUST BE TAKEN WHEN INSTALLING THE COUPLER GASKETS. If the gaskets are not properly lubricated and installed, a leak may develop.

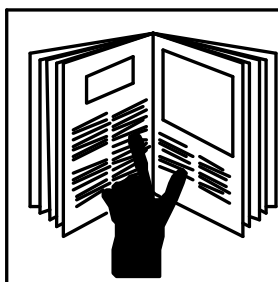

WARNING

REFER TO THE SAFETY STATE MENTS IN THE OEM SUPPLIED MAN UALS AND THIS MANUAL REGARDING THESE OPE RATIONS.



M2-D922


Operating the M2-922 Unit

Prolonged Periods of Storage

Prolonged Periods of Storage

After a thorough cleaning of the internal and external components of the M2-922, the following steps should be applied to extend the life of your unit.

- Prolonged periods of storage require extra care of the pump to protect from rusting internally. Separate the pump (as you would to replace the seal) to dry and spray with a protective oil film.
- Prolonged periods of storage may require engine preparation. See engine operator's manual.

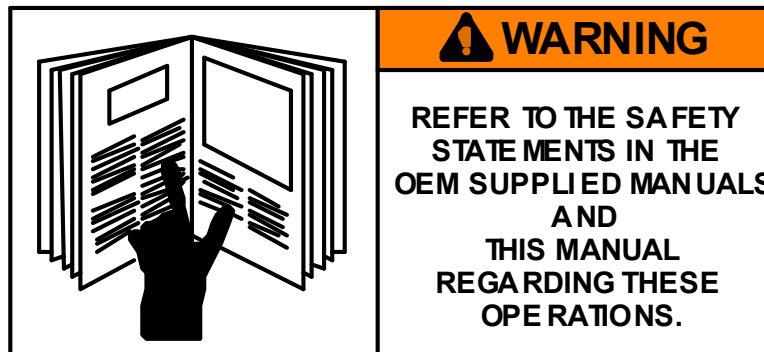

M2-D922

Operating the M2-922 Unit

The M2-D922 can be used in conjunction with certain STS fluid cleaning and recovery units.

The STS fluid cleaning and recovery unit Operators Manual must be read and understood before using the two pieces of equipment together!

The following excerpts were taken from a STS fluid cleaning and recovery unit operators manual and are only considered a general quick reference guide.

Fluid Recovery Operation

Preparing the Hoses (Priming)

After the M2-922 mixer has mixed the drill fluid, it will now be used to draw the spent (dirty) drill fluid from the pit/sump or tank and send it to a STS fluid cleaning and recovery unit.

If this is the first time the M2-922 mixer pump will be drawing (sucking) spent fluid from the pit/sump, the pit/sump suction hose will have to be filled. To do this procedure properly refer to and follow the instructions below.


This procedure will only have to be followed when changing from one pit/sump to another, the pit/sump hose is disconnected from the mixer, or the suction hose strainer is raised out of the pit /sump.

- Shut off the M2-922 mixer, disconnect the STS fluid cleaning and recovery unit feed hose from the head assembly and secure it back into the pit/sump.
- Rotate the handle of the pump discharge valve (top 3-way valve) counter clockwise 90 degrees to the stop.
- Rotate the pump suction valve (bottom 3-way valve) counter clockwise 90 degrees to the stop.
- Start the M2-922 mixer and operate the pump at mid speed until the spent drill fluid is drawn (sucked) from the pit/sump through the suction hose, into the M2-922 mixer pump, and discharges back to the pit/sump through the STS fluid cleaning and recovery unit feed hose.
- The pit/sump suction hose and the feed hose are now full.
- Reconnect the feed hose back onto the STS fluid cleaning and recovery unit head assembly and the unit is ready to treat the spent drill fluid.


Note: If the M2-922 is used on a MAC system the above instructions do not apply. The MAC systems are plumbed with solid connections and the piping will not need to be primed.



**Valve Handles shown in the
Mixing Position**

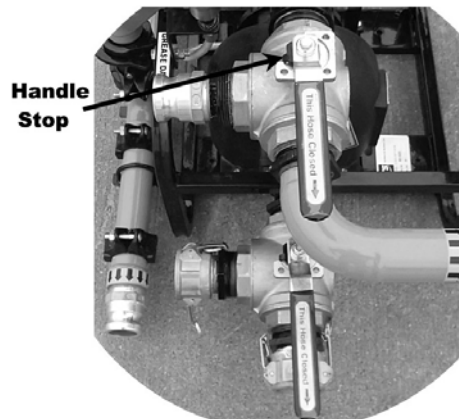

**Valve Handles shown in the
Cleaning/Treating Position**



SECTION #V

Troubleshooting the M2-922 Unit

M2-D922

Troubleshooting the M2-922 Unit

The M2-922 mixing unit is of a simple design with limited moving parts or consumable pieces. The basic system works with a pump that draws fluid from a reservoir tank. The fluid then exits the pump and by building pressure, and velocity, forces the fluid through the filter / shear and into the mixing Tee. The fluid enters the mixing Tee through a nozzle and exists through a venturi. As the fluid enters the venturi, it creates a vacuum in the mixing tee to aid in introducing the dry product from the hopper into the mixing Tee and fluid stream. As the fluid passes through the venturi it carries the dry product with it and into the reservoir tank.

As the fluid travels through the filter / shear, a set amount of fluid is taken from that fluid stream and forced with pressure, to the internal tank jets inside the reservoir tank. Multiple tank jets distribute the fluid throughout the tank to “stir up the tank.”

The M2-922 can discharge fluid to the drill rig or another reservoir by allowing some fluid from the filter shear to be discharged and controlled by a valve.

**A good rule to follow when troubleshooting is as follows
Everything before the pump is being sucked, “has vacuum”.
Everything after the pump is being blown, “has pressure”.**

The following, may aid in any problems that may arise.

- *No fluid flow/ low fluid flow*
 - Pump not primed. - Prime pump**
 - Suction valve is closed - Open suction valve**
 - Suction valve is broken and not opening inside properly. - Replace valve**
 - Plugged suction inlet inside of the tank. - Clean build-up inside of the tank**
 - Not enough fluid in the tank or cavitation - Add fluid to tank**
 - Impeller wore and gap to big. - Shim the impeller or remove gaskets**
 - Blockage in pump. - Remove blockage**
 - Fluid too thick to pump. - Thin fluid by adding more water.**
 - Filter / shear is plugged. - Clean filter shear**
 - Pump speed is set to low - Increase speed of the pump.**
- *Fluid backs up into hopper*
 - No fluid flow / low fluid flow - See above solutions**
 - Large build-up in mixing Tee - Clean mixing Tee**
 - Blockage in small part of venturi. - Remove blockage in venturi.**
 - Pump speed is set to low - Increase speed of the pump.**
- *Dry product is slow or will not be drawn down through the hopper.*
 - No fluid flow/ low fluid flow - See above solutions**
 - Fluid is backing up into hopper - See above solutions**
 - Dry product has lumps / debris blocking hopper valve - New product or clean valve**
 - Hopper valve closed - Open hopper valve**
 - Buildup in throat of mixing Tee - Clean throat of mixing Tee**



M2-D922

Troubleshooting the M2-922 Unit

- *Tank does not stir / roll the fluid inside.*
 - No fluid to the tank jets** - Make sure discharge manifold valve is open.
 - Tank jet holes plugged.** - Flush fresh water through system or clean Tank jets
 - Hose is disconnected from tank jets** - Reconnect hose
 - No fluid flow/ low fluid flow** - See above solutions
- *Discharge from the unit is slow or stopped.*
 - “Outlet” discharge valve is closed** - Make sure valve is open.
 - Discharge hose is blocked, kinked, or pinched off.** - Repair problem(s) with hose.
 - A valve installed at the end of the discharge hose is closed or damaged.** - Open or replace valve.
 - No fluid flow/ low fluid flow** - See above solutions
- *Wash wand has little or no flow or pressure.*
 - Wash wand valve is closed or damaged** - Open wash wand valve or replace.
 - Wash wand nozzle (hole in the end) is plugged** - Shut off unit and clean out wash wand hole.
 - No fluid flow/ low fluid flow** - See above solutions
- *Fluid does not seem to mix well or is slow to mix*
 - Most of the above problems will cause poor mixing or slow mixing** - See above solutions.
- *Engine will not start*
 - See engine operator’s manual for trouble shooting engine.**

**For problems that cannot be solved by the above steps,
call your local distributor or STSI (1-800-567-0978) and talk to a company
representative who would be glad to assist you with your problem.**

SECTION #VI

Periodic Maintenance & Repair Information

M2-D922 Periodic Maintenance Schedule

Consult the OEM engine manual for a more detailed maintenance schedule

<i>Engine Components (as taken from engine manual)</i>							
Maintenance Items	Every 8 hours (daily)	Every 50 hours (weekly)	Every 100 hours	Every 200 hours (monthly)	Every 300 hours	Every 400 hours	Every 2000 hours (or yearly)
Visual check of engine for oil, fuel leaks	●						
Clean engine and check bolts & nuts	●						
Check engine oil level & top-up if necessary	●						
Check fuel level and top up	●						
Drain & Refill engine oil	<i>(initial 50 hours)</i>			●			
Clean engine oil filter (replace if damaged)	<i>(initial 50 hours)</i>			●			
Check battery fluid level (if applicable)		●					
Clean air cleaner & replace when necessary			●				
Check spark arrester for clogging and clean			●				
Lube pivot point & linkage pins on throttle control			●				
Drain & clean fuel tank				●	●		
Replace fuel filter inside of fuel tank						●	
Adjust intake / exhaust valve clearance & compression						●	
Replace fuel system hose(s)							●
<i>Pump Components</i>							
General Condition Visual (Temperature, Unusual Noise or Vibrations, Cracks, Leaks, Loose hardware.	●						
Seal Lubrication (grease seal cup)	●						
Check pump mechanical seal for leakage (dripping)	●						
Clean old grease build-up from inside of Grease Cup				●			
Front impeller clearance (wear plate)						●	
Rear impeller clearance (seal plate)						●	
Check valve						●	
<i>Equipment Components</i>							
Wash out Jetting Tee	●						
Remove & clean shear unit	●						
General Condition Visual (Cracks, Leaks, Loose hardware	●						
Clamps are tight and safety pins installed	●						
Lube valve stems		●					
Clean reservoir tank of build-up (internal)			●				
Disassemble and visually inspect piping (internal)							●

STSI is not to be held liable for any discrepancy's or errors in the schedule.

M2-D922

Grease Seal Installation Instructions Centrifugal Pump Application

When replacing the sea, never mix old and new parts. Wear patterns on the old seal faces cannot be realigned during reassembly, and use of old parts can result in premature failure of the new seal.

Before installing the seal, inspect the bore of the seal liner for excessive wear or grooves that might cause leakage or damage to the seal packing rings. If the seal liner must be replaced, use the new seal liner and arbor (or hydraulic) press to force the old one out. After the liner is installed, drill a 3/8" diameter hole through it to permit the flow of lubricant to the seal liner. Be Careful to center the drill in the threaded lubrication hole so not to damage the threads. Debur the hole from the inside of the seal liner after drilling.

Clean the seal cavity and shaft with a cloth soaked in fresh cleaning solvent. Be sure to follow all safety precautions described on the solvent container.

Remove the new seal and inspect the precision finished faces to ensure that they are free of any foreign matter. To ease installation of the seal, lubricate the packing rings, spacer sleeve, and seal liner with water or a very small amount of oil and apply a drop of light lubrication oil on the precision finished faces. Refer to the illustration, and assemble the seal as follows.

Installation of the inboard rotating element is dictated by the configuration of the shaft shoulder. If there is a radius at the shaft shoulder, the larger chamfer on the I.D. of the inboard rotating element must be positioned toward the shaft shoulder. If there is an undercut at the shaft shoulder, the larger chamfer must be positioned away from the shaft shoulder. Determine the correct position for the rotating element and slide it onto the shaft.

Sub assemble the inboard stationary element, packing ring and spring washer, and press this subassembly into the lubricated seal liner. A push tube cut from a length of plastic will aid seal installation. The O.D. of the tube should be about the same size as the O.D. of the seal spring.

Install the spacer sleeve and spring.

Sub assemble the outboard stationary element, packing ring and spring washer. Press this subassembly into the lubricated seal liner. If the outboard rotating element has a chamfered side, install it with the chamfer facing the impeller end of the shaft.

If your pump requires a spacer washer, install the spacer washer with the chamfer on the I.D. positioned toward the seal.

Install the impeller adjusting shims and impeller (consult the operator's manual for impeller clearance and installation instructions).

Before starting the pump, reinstall the automatic lubricating grease cup and piping (if removed for seal liner replacement). Lubricate the seal as indicated below.

LUBRICATION

Fill the grease cup through the grease fitting with No. 2 lithium base grease until grease escapes from the relief hole. Turn the grease cup arm counterclockwise until it is at the top of the stem; this will release the spring to apply grease to the seal.

NOTE:

Some smoking and leakage may occur after installing a new seal assembly. This should stop after the pump has run a while and the lapped seal faces have seated in.



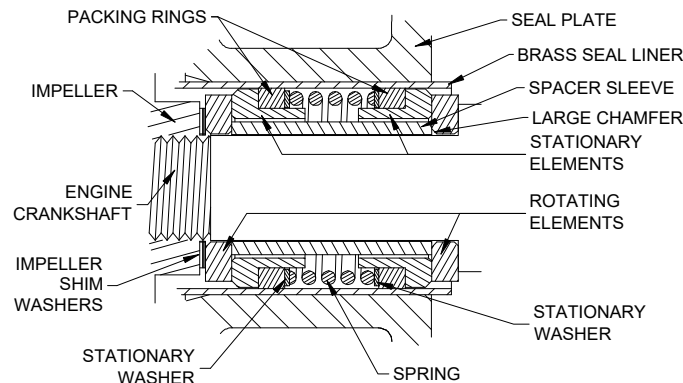



Figure 3. Grease Seal Assembly

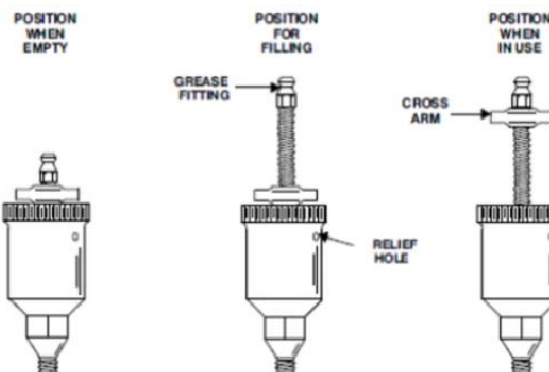

Bolt Torque Specifications



Grade 5



Grade 8

SAE SIZE	Lubricated *		Dry **	
	N.m	ft-lbs	N.m	ft-lbs
1/4	9.5	7	12	9
5/16	20	15	25	18
3/8	35	26	44	33
7/16	55	41	70	52
1/2	85	63	110	80
9/16	125	90	155	115
5/8	170	125	215	160
3/4	300	225	375	280
7/8	490	360	625	450
1	725	540	925	675

Lubricated *		Dry **	
N.m	ft-lbs	N.m	ft-lbs
13.5	10	17	12.5
28	21	35	26
50	36	63	46
80	58	100	75
120	90	150	115
175	130	225	160
215	160	300	225
425	310	550	400
700	500	875	650
1050	750	1300	975

* "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings.

** "Dry" means plain or zinc plated without any lubrication.

Metric size

Thread size x pitch mm	N.m	ft-lbs
M6 X 1.0	10.8 ± 1.0	8.0 ± 0.5
M8 x 1.25	25.5 ± 2.9	19.0 ± 2.0
M10 x 1.5	49.0 ± 4.9	36.0 ± 4.0
M12 x 1.75	88.3 ± 9.8	65.0 ± 7.0
M14 x 1.5	137.0 ± 9.8	101.0 ± 7.0
M16 x 1.5	226.0 ± 9.8	167.0 ± 7.0

Apply 60% torque to bolts that are not listed.

Apply 80% torque when tightened to aluminum alloy.



M2-D922

NOTES:

[illegible]

SECTION #VII

OEM Repair Information

GR PUMP INTRODUCTION

Read this manual carefully to learn how to safely install and operate your pump. Failure to do so could result in personal injury or damage to the pump.

This Operation, and Maintenance section is designed to help you achieve the best performance and longest life from your pump.

This pump is an 80 Series, semi-open impeller, self-priming centrifugal model with a suction check valve. The pump is designed for straight-in suction where the medium being pumped enters directly into the impeller eye. It is designed for handling most non-volatile, non-flammable liquids containing specified entrained solids. The basic material of construction for wetted parts is gray iron.

This manual cannot possibly provide detailed instructions and precautions for every aspect of each specific installation by the customer. Therefore, it is the responsibility of the owner/installer of the mixing unit to ensure that applications not addressed in this manual are performed **only** after establishing that neither operator safety nor pump integrity are compromised by the installation. Pumps and related equipment **must** be installed and operated according to all national, local and industry standards.

If there are any questions regarding the pump or its application, which are not covered in this manual or in other literature accompanying this unit, please contact Surface to Surface or your STS distributor.

Surface to Surface Inc 1-800-567-0978

The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:



Immediate hazards which WILL result in severe personal injury or death. These instructions describe the procedure required and the injury, which will result from failure to follow the procedure.



Hazards or unsafe practices, which COULD result in severe personal injury or death. These instructions describe the procedure required and the injury, which could result from failure to follow the procedure.



Hazards or unsafe practices, which COULD result in minor personal injury or product or property damage. These instructions describe the requirements and the possible damage, which could result from failure to follow the procedure.

NOTE

Instructions to aid in installation, operation, and maintenance, or which clarify a procedure.

SAFETY

This information applies to 80 Series basic pumps. The power source, which is used to drive the pump, may differ from unit to unit. Refer to the manual accompanying the power source before attempting to begin operation.



WARNING!

Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Lock out or disconnect the power source to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature before opening any covers, plates, or plugs.
5. Close any suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.



WARNING!

This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids. Do not attempt to pump liquids for which the pump, driver and/or controls have not been approved, or which may damage the pump or endanger personnel as a result of pump failure.



WARNING!

Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment. Suction and discharge hoses and piping must be removed from the pump before lifting.



WARNING!

Make certain that the unit and all piping or hose connections are tight, properly supported and secure before operation.



WARNING!

Do not operate the pump without the shields and/or guards in place over the drive shaft, belts, and/or couplings, or other rotating parts. Exposed rotating parts can catch clothing, fingers, or tools, causing severe injury to personnel.



WARNING!

Do not operate the pump against a closed discharge valve for long periods of time. If operated against a closed discharge valve, pump components will deteriorate, and the liquid could come to a boil, build pressure, and cause the pump casing to rupture or explode.

SAFETY continued



WARNING!

Overheated pumps can cause severe burns and injuries. If overheating of the pump occurs:

1. Stop the pump immediately.
2. Ventilate the area.
3. Allow the pump to completely cool.
4. Check the temperature before opening any covers, plates, gauges, or plugs.
5. Vent the pump slowly and cautiously.
6. Refer to instructions in this manual before restarting the pump.



WARNING!

Do not remove plates, covers, gauges, pipe plugs, or fittings from an overheated pump. Vapor pressure within the pump can cause parts being disengaged to be ejected with great force. Allow the pump to completely cool before servicing.



WARNING!

Never run this pump backwards. Be certain that rotation is correct before fully engaging the pump.



CAUTION

Pumps and related equipment must be installed and operated according to all national, local and industry standards.

OPERATION

Review all SAFETY information in this manual. Follow the instructions on all tags, labels and decals attached to the pump.



This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids. Do not attempt to pump liquids for which the pump, driver and/or controls have not been approved, or which may damage the pump or endanger personnel as a result of pump failure.

PRIMING

Install the unit and hoses as described in this manual.

Make sure that the piping and hose connections are tight, and that the unit is securely mounted. Check that the pump is properly lubricated (see LUBRICATION and REPAIR).

This pump is self-priming, but the pump should never be operated unless there is liquid in the pump casing.



Never operate this pump unless there is liquid in the pump casing. The pump will not prime when dry. Extended operation of a dry pump will destroy the seal assembly.

Add liquid to the pump casing when:

1. The pump is being put into service for the first time.
2. The pump has not been used for a considerable length of time.
3. The liquid in the pump casing has evaporated.

Once the pump casing has been filled, the pump will prime and re-prime as necessary.



After filling the pump casing, reinstall and tighten the fill plug. Do not attempt to operate the pump unless all connecting piping and hoses are securely installed. Otherwise, liquid in the pump forced out under pressure could cause injury to personnel.

To fill the pump, remove the pump casing fill cover or fill plug in the top of the casing, and add clean liquid until the casing is filled. Replace the fill cover or fill plug before operating the pump.

TROUBLESHOOTING

Review all SAFETY information in Section A.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Lock out or disconnect the power source to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP FAILS TO PRIME	Not enough liquid in casing. Suction check valve contaminated or damaged. Air leak in suction line. Leaking or worn seal or pump gasket.	Add liquid to casing. See PRIMING . Clean or replace check valve. Correct leak. Check pump vacuum. Replace leaking or worn seal or gasket.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Air leak in suction line. Leaking or worn seal or pump gasket. Impeller or other wearing parts worn or damaged. Impeller clogged.	Correct leak. Check pump vacuum. Replace leaking or worn seal or gasket. Replace worn or damaged parts. Check that impeller is properly centered and rotates freely. Free impeller of debris.

PREVENTIVE MAINTENANCE

Pump wear is directly affected by such things as the abrasive qualities, pressure and temperature of the liquid being pumped, this section is intended only to provide general recommendations and practices for preventive maintenance. Regardless of the application however, following a routine preventive maintenance schedule will help assure trouble-free performance and long life from your 80 series pump.

Record keeping is an essential component of a good preventive maintenance program. Changes in suction and discharge gauge readings (if so equipped) between regularly scheduled inspections can indicate problems that can be corrected before system damage or catastrophic failure occurs.

The appearance of wearing parts should also be documented at each inspection for comparison as well. Also, if records indicate that a certain part (such as the seal) fails at approximately the same duty cycle, the part can be checked and replaced before failure occurs, reducing unscheduled down time.

For new applications, a first inspection of wearing parts at 250 hours will give insight into the wear rate for your particular application. Subsequent inspections should be performed at the intervals shown on the chart below. Critical applications should be inspected more frequently.


Preventive Maintenance Schedule					
Item	Service Interval*				
	Daily	Weekly	Monthly	Semi-Annually	Annually
General Condition (Temperature, Unusual Noises or Vibrations, Cracks, Leaks, Loose Hardware, Etc.)	I				
Bearing Lubrication (if so Equipped)	I	I			R
Seal Lubrication (If So Equipped)	I	I			R
Front Impeller Clearance (Wear Plate)				I	
Rear Impeller Clearance (Seal Plate)				I	
Check Valve				I	
Pump and Driver Alignment				I	
Bearings				I	
Bearing Housing				I	
Piping				I	
Driver Lubrication - See Mfgr's Literature					
Legend: I = Inspect, Clean, Adjust, Repair or Replace as Necessary R = Replace <i>* Service interval based on an intermittent duty cycle equal to approximately 4000 hours annually Adjust schedule as required for lower or higher duty cycles or extreme operating conditions.</i>					

GR-82E2 ASSEMBLY PARTS LIST

(P/N #060-GR82E2-KIT)

REF #	DESCRIPTION	STS PART NUMBER	QTY REQ.
1	Grease Cup	060-S36	1
2	3/8" Nut	060-GRD0615991	11
	3/8" L/W	076-33622	11
3	Seal Plate Assembly	060-GR427A10010	1
4	Brass Seal Liner	060-GR8314080	1
5	Casing Gasket Set	060-GR229G18000	1
6	Grease Seal assembly	060-GRGS1000	1
7	Shim Pack	060-GR2X17090	1
8**	Impeller (60 Hz.)	060-GR6709 100105.5	1
	Impeller (50 Hz.)	060-GR6709 10010	1
9	Wear Plate	060-GR682215990	1
10	Pump Casing	060-GR46472-309	1
11	Stud	060-GRC060615991	4
12	Pipe Plug	060-GRP1215079	1
13	Hex Cap Screw	060-GRB061415991	1
	Fiber Washer	060-GRKF0618040	1
14	HD Machine Screw	060-GRX040317090	1
	L/W	060-GRJ0417090	1
15	Large Valve Weight	060-GR19B10010	1
16	Check Valve Gasket	060-GR1361G19070	1
17	Small Valve Weight	060-GR135415160	1
18	Suction Flange	060-GR136113040	1
19	Filler Pipe Plug	060-GR48271-063	1

Remote mounted grease cup included in power units

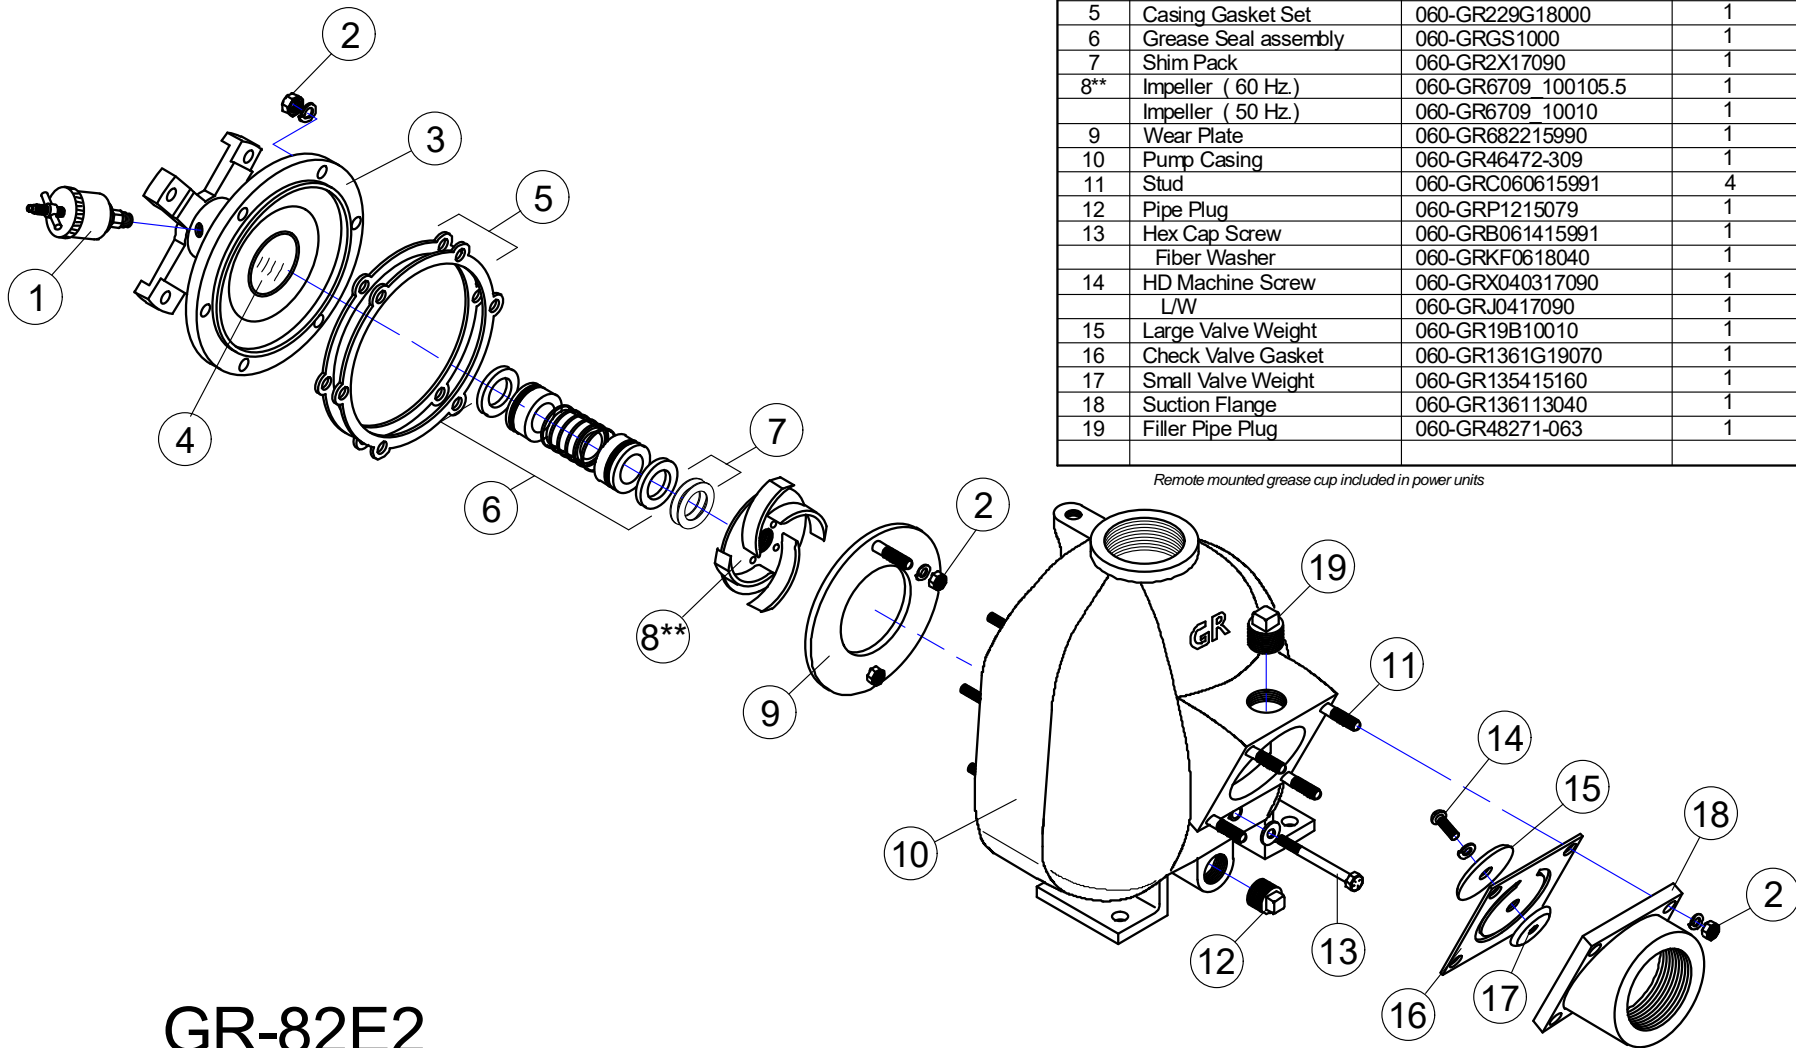

GR-82E2

03/17/21

Figure 1. Pump exploded view

GR-82E2

PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

Review all **SAFETY** information in Section A.

Follow the instructions on all tags, label and decals attached to the pump.

This pump requires little service due to its rugged, minimum-maintenance design. However, if it becomes necessary to inspect or replace the wearing parts, follow these instructions, which are keyed to the sectional view (see Figure 1) and the accompanying parts list.

This manual will alert personnel to known procedures which require special attention, to those, which could damage equipment, and to those, which could be dangerous to personnel. However, this manual cannot possibly anticipate and provide detailed precautions for every situation that might occur during maintenance of the unit. Therefore, it is the responsibility of the owner/maintenance personnel to ensure that **only** safe, established maintenance procedures are used, and that any procedures not addressed in this manual are performed **only** after establishing that neither personal safety nor pump integrity are compromised by such practices.

Before attempting to service the pump, lock out or disconnect the power source to ensure that it will remain inoperative. Close all valves in the suction and discharge lines.

For power source disassembly and repair, consult the literature supplied with the power source, or contact your local power source representative.



Before attempting to open or service the pump:

1. **Familiarize yourself with this manual.**
2. **Lock out or disconnect the power source to ensure that the pump will remain inoperative.**
3. **Allow the pump to completely cool if overheated.**

4. **Check the temperature before opening any covers, plates, or plugs.**
5. **Close any suction and discharge valves.**
6. **Vent the pump slowly and cautiously.**
7. **Drain the pump.**



Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment. Suction and discharge hoses and piping must be removed from the pump before lifting.

For engine disassembly and repair, consult the literature supplied with the engine, or contact your local Honda representative.

Suction Check Valve Disassembly

Before attempting to service the pump, remove the pump casing drain plug (12) and drain the pump. Clean and reinstall the drain plug.

For access to the check valve, remove the suction hose. Remove the nuts (2) and separate the suction flange (18) and check valve (16) from the pump casing (10).

Inspect the check valve parts for wear or damage. If replacement is required, remove the hardware (14, 15, 17) and separate the check valve gasket and weights.

Pump Casing and Wear Plate Removal

To service the wear plate (9), remove the nuts & lock washers (2) securing the pump casing to the seal plate (3) and engine. Separate the pump casing and remove the gasket set (5).

Inspect the wear plate for scoring or excessive wear.

To remove the wear plate, disengage the hardware (2, 13). Pull the wear plate out of the pump casing.

PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

Impeller Removal

Before removing the impeller, screw the cross arm on the automatic lubricating grease cup (1) clockwise until it rests against the cover (see Figure 4) to prevent the grease in the cup from escaping. Remove the grease cup and piping (1).

Using a hardwood block of wood positioned against the impeller vane, strike the hardwood block with a hammer, in a counter clock-wise rotation (viewed from the impeller end).

Loosening the impeller is the same rotation as loosening a standard nut and bolt.

Inspect the impeller and replace it if cracked or badly worn. Slide the impeller adjusting shims (7) off the impeller shaft. Tie and tag the shims, or measure and record their thickness for ease of reassembly.

Seal Removal and Disassembly

Remove the outer rotating element, shaft sleeve, and remaining seal parts off the shaft as a unit. Carefully remove the stationary and rotating seal elements, packing rings and washers, seal spring and spacer sleeve from the seal plate.

Inspect the seal plate and replace it if cracked or badly worn. To remove the seal plate (3) from the engine, remove the bolts and lock washers, or nuts and lock washers from the studs. Inspect the seal liner (4) for wear or grooves that could cause leakage or damage to the seal packing rings. The seal liner is a press fit into the seal plate and does not normally require replacement.

If the seal liner requires replacement, remove the seal plate assembly as described above, and position it on the bed of an arbor (or hydraulic) press. Use a new sleeve to force the old one out. After the new liner is properly installed, a 3/8-inch (9.5 mm) diameter hole must be drilled through it to permit the flow of lubricant to the seal assembly. Be careful to center the drill in the threaded grease piping hole and not damage the threads. Deburr the hole from the inside of the seal liner after drilling.

Seal Reassembly and Installation

(Figures 1 and 3)

Clean the seal cavity and shaft with a cloth soaked in fresh cleaning solvent.



Most cleaning solvents are toxic and flammable. Use them only in a well ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.

The seal is not normally reused because wear patterns on the finished faces cannot be realigned during reassembly. This could result in premature failure. If necessary to reuse an old seal in an emergency, carefully wash all metallic parts in fresh cleaning solvent and allow to dry thoroughly.

Handle the seal parts with extreme care to prevent damage. Be careful not to contaminate precision finished faces; even fingerprints on the faces can shorten seal life. If necessary, clean the faces with a non-oil based solvent and a clean, lint-free tissue. Wipe lightly in a concentric pattern to avoid scratching the faces.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause leakage.

Clean and polish the shaft sleeve, or replace it if there are nicks or cuts on either end. If any components are worn, replace the complete seal.

Never mix old and new seal parts.

If a replacement seal is being used, remove it from the container and inspect the precision finished faces to ensure that they are free of any foreign matter.

To ease installation of the seal, lubricate the seal liner (4) with water or a very small amount of oil, and apply a drop of light lubricating oil on the finished faces. Assemble the seal as follows, (see Figure 3).

Slide the seal plate assembly over the impeller shaft and secure the seal plate to the engine using the bolts and lock washers or nuts and lock washers on studs.

Slide the inboard rotating element into the lubricated seal liner with the chamfered side toward the shaft shoulder.

PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

Seal Reassembly and Installation *continued* (Figures 1 and 3)

Sub assemble the inboard stationary seat, packing ring and stationary washer. Press this unit into the lubricated seal liner until the seal faces contact.

A push tube cut from a length of plastic pipe or deep socket would aid in this installation. The I.D. of the tube or socket should be approximately the same size as the I.D. of the seal spring.

Slide the spacer sleeve onto the shaft until it seats against the inboard rotating element and install the seal spring.

Sub assemble the outboard stationary seat, packing ring and stationary washer. Press this unit into the lubricated seal liner. Install the outboard rotating element with the chamfered side toward the impeller. Lubricate the seal assembly as indicated in LUBRICATION *after the impeller has been installed.*

Impeller Installation

Inspect the impeller and replace it if cracked or badly worn.



The shaft and impeller threads must be completely clean before reinstalling the impeller. Even the slightest amount of dirt on the threads can cause the impeller to seize to the shaft, making future removal difficult or impossible without damage to the impeller or shaft.

Install the same thickness of impeller shims (7) as previously removed and screw the impeller onto the shaft until tight. Bump the impeller tight with a wood block or soft mallet.

The clearance between the back of the impeller and the seal plate should be between 0.010 and 0.020 inch (0,25 to 0,51 mm).

Measure this clearance and add or remove shims from the impeller adjusting shim set until the correct clearance is achieved.

Pump Casing and Wear Plate Installation

If the wear plate assembly (9) was removed, install the new wear plate in the pump casing and secure it with the hardware (2 & 13).

Install a new set of casing gaskets (5) and slide the pump casing over the impeller and against the gaskets.

The clearance between the face of the impeller and the wear plate should be between .010 and .020 inch (0,25 to 0,51 mm).

Remove gaskets from the gasket set until the correct clearance is achieved. Secure the pump casing to the seal plate with nuts & lock washers (2).

Suction Check Valve Installation

Inspect the check valve components and replace them as required. Sub assemble the check valve weights and gasket using the attaching hardware (14, 15, 16, 17).

Install the check valve assembly on to the studs (11). Large weight toward the pump casing. Replace the suction flange onto the studs (11), and secure with the nuts (2).

Check the operation of the check valve to ensure proper seating and free movement.

Final Pump Reassembly

Be sure all hardware and drain plugs are tight, and that the pump is secure to the base and power source.

Install the suction and discharge lines / hoses and open all valves. Make certain that all piping connections are tight, and that the weight of the hose is independently supported and secure.

Before starting the pump, fill the pump casing with clean liquid.

Apply Pipe Sealant or equivalent compound to the fill plug (19). Reinstall and tighten the fill plug.

Refer back to OPERATION, before putting the pump back into service.

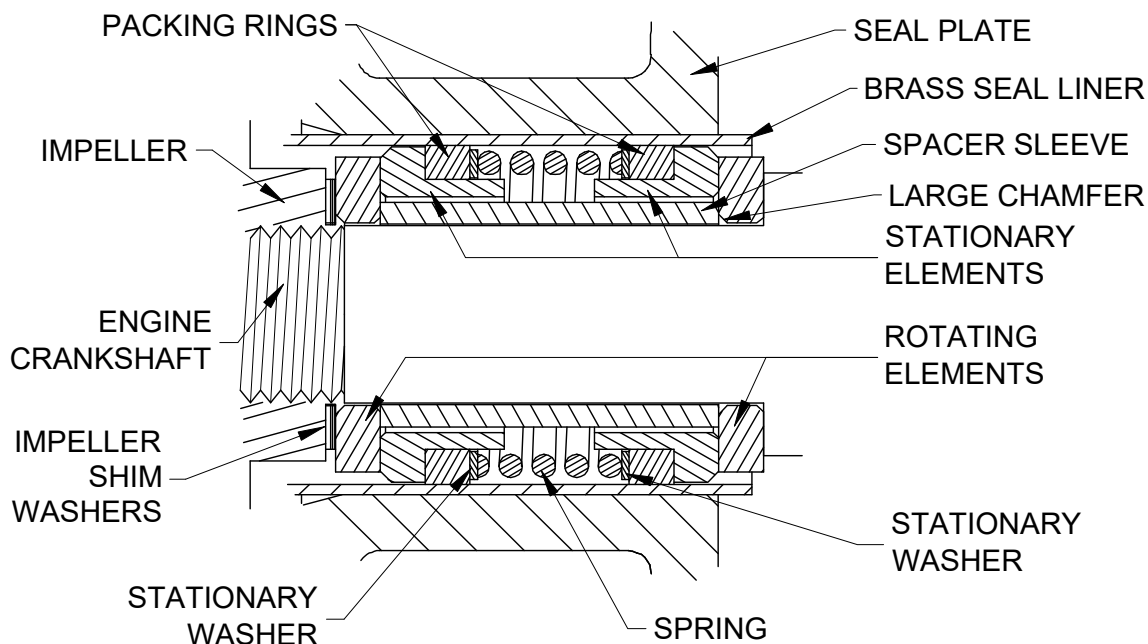


Figure 3. Grease Seal Assembly

LUBRICATION

Fill the grease cup (1) through the grease fitting with No. 2 lithium base grease until grease escapes from the relief hole. Turn the grease cup arm counterclockwise until it is at the top of the stem; this will release the spring to apply grease to the seal (see Figure 4).

NOTE:

Some smoking and leakage may occur after installing a new seal assembly. This should stop after the pump has run a while and the lapped seal faces have seated in

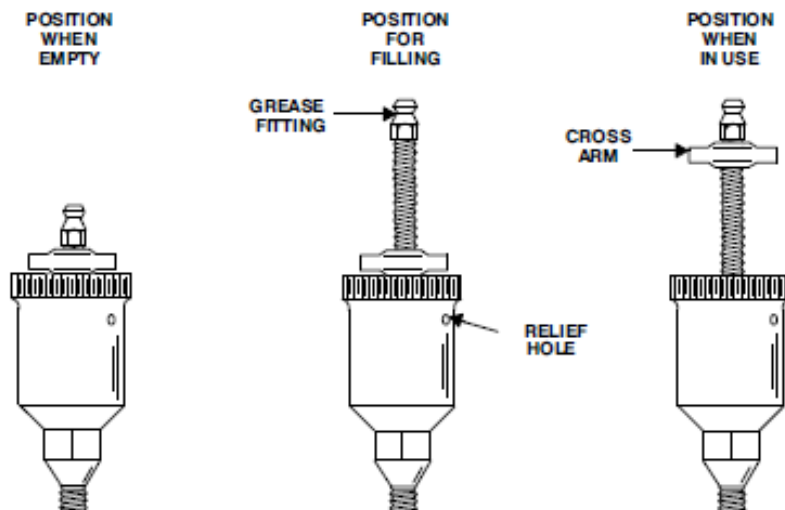


Figure 4. Automatic Lubricating Grease Cup

Figure 4. Grease cup

Grease Seal Installation Instructions

Centrifugal Pump Application

When replacing the seal, never mix old and new parts. Wear patterns on the old seal faces cannot be realigned during reassembly, and use of old parts can result in premature failure of the new seal.

Before installing the seal, inspect the bore of the seal liner for excessive wear or grooves that might cause leakage or damage to the seal packing rings. If the seal liner must be replaced, use the new seal liner and arbor (or hydraulic) press to force the old one out. After the liner is installed, drill a 1/4" diameter hole through it to permit the flow of lubricant to the seal liner. Be Careful to center the drill in the threaded lubrication hole so not to damage the threads. Deburr the hole from the inside of the seal liner after drilling.

Clean the seal cavity and shaft with a cloth soaked in fresh cleaning solvent. Be sure to follow all safety precautions described on the solvent container.

Remove the new seal and inspect the precision finished faces to ensure that they are free of any foreign matter. To ease installation of the seal, lubricate the packing rings, spacer sleeve, and seal liner with water or a very small amount of oil and apply a drop of light lubrication oil on the precision finished faces. Refer to the illustration, and assemble the seal as follows.

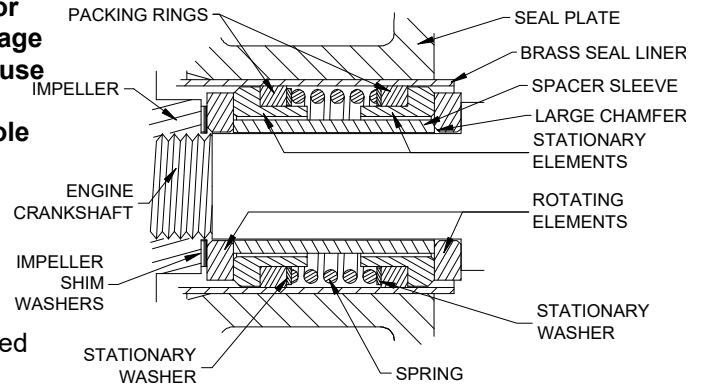


Figure 3. Grease Seal Assembly

Installation of the inboard rotating element is dictated by the configuration of the shaft shoulder. If there is a radius at the shaft shoulder, the larger chamfer on the I.D. of the inboard rotating element must be positioned toward the shaft shoulder. If there is an undercut at the shaft shoulder, the larger chamfer must be positioned away from the shaft shoulder. Determine the correct position for the rotating element and slide it onto the shaft.

Sub assemble the inboard stationary element, packing ring and spring washer, and press this subassembly into the lubricated seal liner. A push tube cut from a length of plastic will aid seal installation. The O.D. of the tube should be about the same size as the O.D. of the seal spring.

Install the spacer sleeve and spring.

Sub assemble the outboard stationary element, packing ring and spring washer. Press this subassembly into the lubricated seal liner. If the outboard rotating element has a chamfered side, install it with the chamfer facing the impeller end of the shaft.

If your pump requires a spacer washer, install the spacer washer with the chamfer on the I.D. positioned toward the seal.

Install the impeller adjusting shims and impeller (consult the operator's manual for impeller clearance and installation instructions).

Before starting the pump, reinstall the automatic lubricating grease cup and piping (if removed for seal liner replacement). Lubricate the seal as indicated below.

LUBRICATION

Fill the grease cup through the grease fitting with No. 2 lithium base grease until grease escapes from the relief hole. Turn the grease cup arm counterclockwise until it is at the top of the stem; this will release the spring to apply grease to the seal.

NOTE:

Some smoking and leakage may occur after installing a new seal assembly. This should stop after the pump has run a while and the lapped seal faces have seated in.

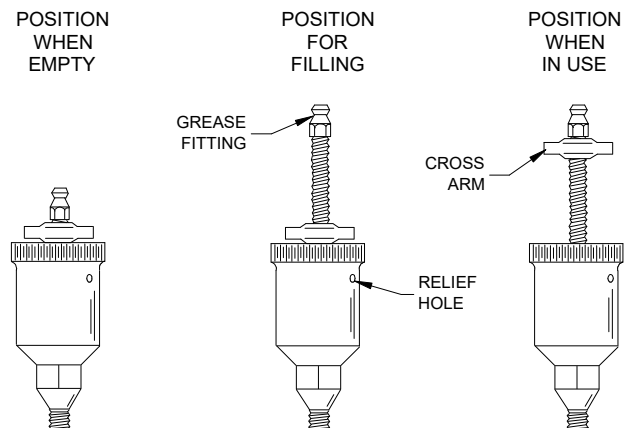



Figure 4. Automatic Lubricating Grease Cup

FOR ENGINE SERVICE GO TO:

<http://www.yanmar.com/products/industrial-engines/>

On the bottom, go to “Find a Dealer”
and follow prompts to find a center near you

Surface to Surface has a limited engine parts inventory. Parts not in stock will have to be ordered.




PRODUCTS ▾ WHERE TO BUY NEWS & EVENTS CORPORATE CONTACT Q SEARCH  Visit Our Global Site

INDUSTRIAL ENGINES


HOME AIR COOLED LIQUID COOLED SERVICE & SUPPORT PARTS EMISSIONS DISTRIBUTOR EXTRANET SITE > 

Air Cooled


SEE ALL >>



EPA Certified
L-V Series




Non-Certified
L-N Series



Liquid Cooled


SEE ALL >>



MINIMAX



TNV



Kits



ENGINE MODEL HORSEPOWER RANGE

ENGINE SEARCH

Engine Cooling

Air Cooled ▾

EPA or Export

EPA ▾

SUBMIT


YANMAR NEWS 

Yanmar America Consolidates
Operations Headquarters
09.25.09 | [Industrial Engines](#)

ALL NEWS >

INDUSTRIAL ENGINES

Yanmar has been producing diesel engines since 1933 and today has manufactured over 15 million diesel engines ranging from 4.5 to 5,000 horsepower. Today over one-million Yanmar diesel engines are powering North America's leading edge mobile and stationary off-highway equipment. From construction equipment, generator sets, pressure washers, and turf equipment to military applications and agricultural equipment, Yanmar America is proud to be the leading compact diesel power that helps America and the rest of the world work.



FIND A DEALER

Choose a product or category.

Make a Selection ▾

Enter ZIP/Postal Code

GO

QUESTIONS?

VISIT FAQ >

Request information about Yanmar and our products.

Industrial ▾

GO

VISIT THE SERVICE & SUPPORT
PAGE TO DOWNLOAD:-----


Product Registrations >

Troubleshooting Guides >

Warranty Statements >

64

COUPLING INSTALLATION & ASSEMBLY

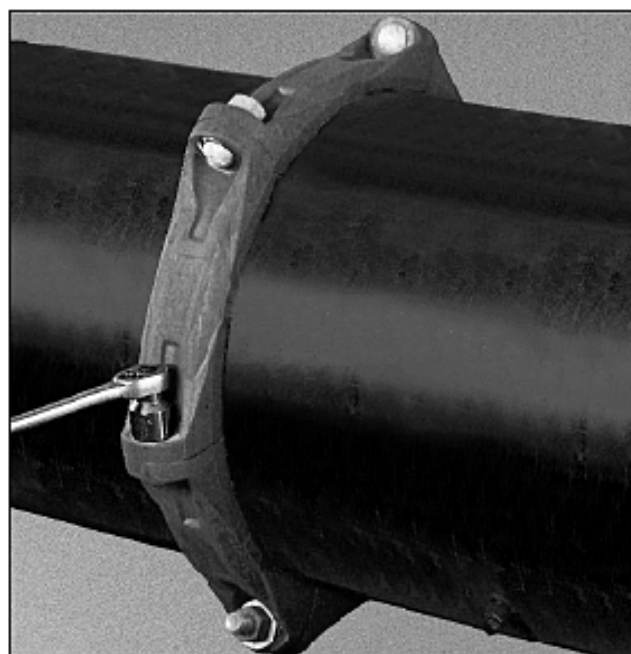

The instructions are based on pipe grooved in accordance with Gruzlok® grooving specifications. Check pipe ends for proper groove dimensions and to assure that the pipe ends are free of indentations and projections which would prevent proper sealing.

ALWAYS USE A GRUVLOK® LUBRICANT FOR PROPER COUPLING ASSEMBLY. Thorough lubrication of the external surface of the gasket is essential to prevent pinching and possible damage to the gasket. For temperatures above 150° F (65.6° C) use Gruzlok Xtreme™ Lubricant and lubricate all gasket surfaces, internal and external. See Gruzlok Lubricants in the Technical Data section of the Gruzlok catalog for additional important information.

SPECIFIED BOLT TORQUE

Specified bolt torque is for the oval neck track bolts used on Gruzlok® couplings and flanges. The nuts must be tightened alternately and evenly until fully tightened. Caution: use of an impact wrench is not recommended because the torque output can vary significantly due to many variables including air pressure supply, battery strength and operational variations.

CAUTION: Proper torquing of coupling bolts is required to obtain specified performance. Over torquing the bolts may result in damage to the bolt and/or casting which could result in pipe joint separation. Under torquing the bolts may result in lower pressure retention capabilities, lower bend load capabilities, joint leakage and pipe joint separation. Pipe joint separation may result in significant property damage and serious injury.

ANSI SPECIFIED BOLT TORQUE		
Bolt Size	Wrench Size	Specified Bolt Torque *
In.	In.	FT.-Lbs
3/8	11/16	30-45
1/2	3/4	80-100
5/8	1 1/16	100-130
3/4	1 1/8	130-180
7/8	1 3/8	180-220
1	1 1/2	200-250
1 1/8	1 7/8	225-275
1 1/4	2	250-300

* Non-lubricated bolt torques.

METRIC SPECIFIED BOLT TORQUE		
Bolt Size	Wrench Size	Specified Bolt Torque *
mm	mm	N-m
M10	16	40-60
M12	22	110-150
M16	24	135-175
M20	30	175-245
M22	34	245-300
M24	36	270-340

* Non-lubricated bolt torques.

NOTE: Specified torques are to be used unless otherwise noted on Product Installation Instructions.

FIG. 7000

Lightweight Flexible Coupling




1 CHECK & LUBRICATE GASKET— Check gasket to be sure it is compatible for the intended service. Apply a thin coating of Gruvlok lubricant to outside and sealing lips of the gasket. Be careful that foreign particles do not adhere to lubricated surfaces.




2 GASKET INSTALLATION— Slip the gasket over the pipe end, making sure the gasket lip does not overhang the pipe end.



3 ALIGNMENT— After aligning the two pipe ends together, pull the gasket into position, centering it between the grooves on each pipe. Gasket should not extend into the groove on either pipe.

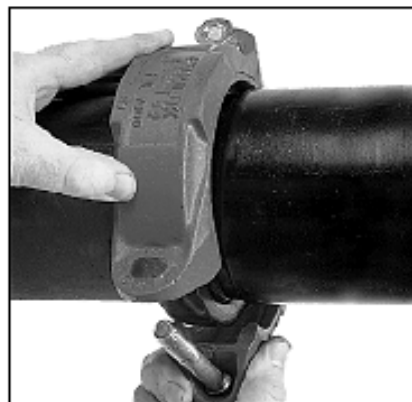


4 HOUSINGS— With one nut unthreaded to the end of the bolt, unthread the other nut completely and swing the coupling housing halves over the gasket, making sure the housing keys engage the grooves. Insert the bolt and turn the nuts finger tight.

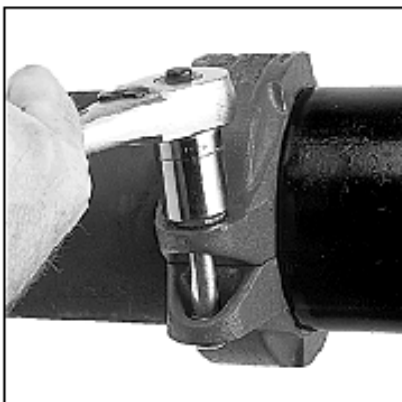

5 TIGHTEN NUTS— Tighten the nuts alternately and equally to the specified bolt torque. The housing bolt pads must make metal-to-metal contact.

CAUTION: Uneven tightening may cause the gasket to pinch.

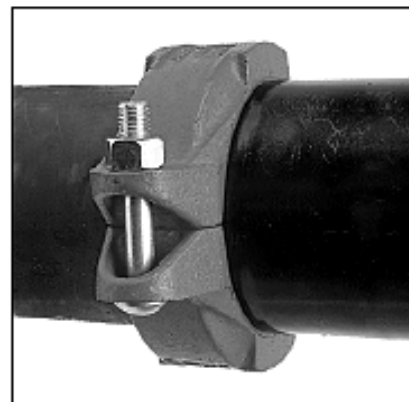

6 ASSEMBLY IS COMPLETE— Visually inspect the pipe joint to assure the coupling keys are fully engaged in the pipe grooves and the bolt pads are in firm even metal-to-metal contact on both sides of the coupling.

CAUTION: Use of an impact wrench is not recommended because the torque output can vary significantly due to many variables including air pressure supply, battery strength and operational variations.

CAUTION: Proper torquing of coupling bolts is required to obtain specified performance. Over torquing the bolts may result in damage to the bolt and/or casting which could result in pipe joint separation. Under torquing the bolts may result in lower pressure retention capabilities, lower bend load capabilities, joint leakage and pipe joint separation. Pipe joint separation may result in significant property damage and serious injury.

NOTE: VdS - Roll Grooving Approval Specifications, see the Technical Data/Installation Instructions section on Anvil's web site - www.anvilintl.com

FIG. 7003

Hingelok™ Coupling

NOTE: Remove locking pin from handle before opening coupling.



1 CHECK & LUBRICATE GASKET— Check gasket to be sure it's compatible for the intended service. Apply a thin coating of GUVLOK lubricant to outside and sealing lips of the gasket. Be careful that foreign particles do not adhere to lubricated surfaces.




2 GASKET INSTALLATION— Slip the gasket over the pipe end making sure the gasket lip does not overhang the pipe end.




3 ALIGNMENT— After aligning the two pipe ends, pull the gasket into position centering it between the grooves on each pipe. Gasket should not extend into the groove on either pipe.



4 HOUSINGS— Put one half of the open coupling over the gasket as the coupling keys fit firmly into the grooves on each pipe and. Swing the other half of the coupling into position around the gasket and into the grooves.

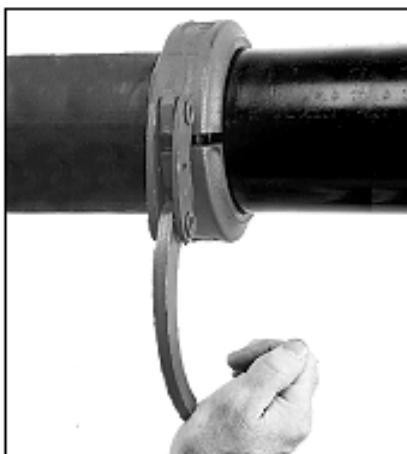

5 LOCK COUPLING— Fit the nose of the locking handle in the notch of the opposite housing. Press firmly down on the handle until it makes contact with the coupling housing. Insert locking pin into handle linkage to secure handle in closed position. (See Caution.)

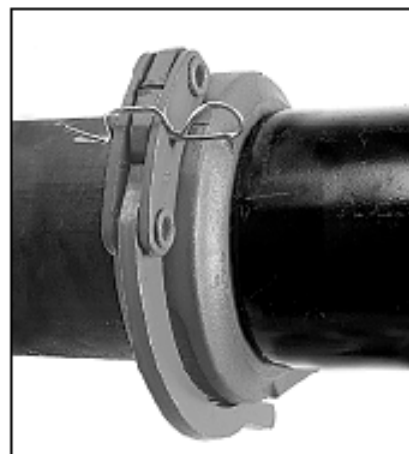

6 ASSEMBLY IS COMPLETE— Visually inspect the pipe joint to assure the coupling keys are fully engaged in the pipe grooves and the bolt pads are in firm even metal-to-metal contact on both sides of the coupling.

CAUTION:

- 1) Hammering or banging on the handle or coupling housing could cause serious damage to the locking device and coupling assembly. The result may be an unsuitable pipe joint and unusable coupling assembly.
- 2) Care needs to be taken so that fingers do not get caught or pinched when handle is placed in locked position as a result of cam action of handle assembly.
- 3) When re-using coupling and gasket, always inspect gasket for damage and hinge/handle assembly for looseness, distortion or any other damage.

SECTION #VIII

(M2-D922 Parts Manual)

Use this Parts Manual if the mixer is used independently as a mixer only

BU-M2922 ASSEMBLY PARTS LIST

(P/N #BU-M2922)

REF #	DESCRIPTION	STS PART NUMBER	QTY REQ.	
1	Crash Frame	M2-601	1	B
2	2" NPT x Close Nipple	018-330-03700-3	2	B
3	2 1/2" x 2" Reducing Elbow	018-310-01042-0	1	B
4	2 1/2" NPT x Close Nipple	018-330-04000X	1	B
5	2 1/2" 3-way Ball Valve	022-0355N-T	2	
6	2 1/2" x 2" NPT Hex Bushing	018-318-90785-X	5	B
7	2" Female Cam-loc	025-200-B-AL	3	
8	2" Male Cam-loc	025-200-F-AL	4	
9	Pump Discharge Pipe	M2-657	1	B
10	2" Hinge-Loc Coupler	020-390-20048-3	2	B
	2" Coupler EPDM Gasket	020-390-078640		
11	Filter Shear Cartridge	M2-655	1	O
12	1 1/2" Pipe Plug	018-318-90252-5	1	O
13	3" Hinge-Loc Coupler	020-390-20006-1	1	B
	3" Coupler EPDM Gasket	020-390-078681		
14	Filter Shear Housing	M2-616	1	O
15	1 1/2" Ball Valve	022-423-00012-4	2	
16	2" x 1 1/2" NPT Reducing Elbow	018-310-018020-X	2	B
17	1/2" 90° Street Elbow	018-310-01620-9	1	B
18	Gauge	035-CF1C30/060A	1	
19	1/2" NPT x 5/8" Hose Barb	018-1661268222X	1	B
20	PEX Hose Clamp	025-PEX-SS3/4	2	
21	5/8" Clear Cotton Braid Hose	025-K3150-625	31"	
22	Adaptor	M2-618	1	O
23	3/8" NPT x Close Nipple	018-330-00980-4	1	B
24	3/8" Ball Valve	022-423-00002-5	1	
25	Wash Wand	M2-619	1	O
26	2" Groove-Loc Coupler	020-390-00026-3	5	B
	2" Coupler EPDM Gasket	020-390-078640		
27	End Pipe	M2-607	1	O
28	Pipe Clamp	076-42036	2	
29	2" Jetting Nozzel	M2-608	1	O
30	2" Mixing Tee	M2-609	1	O
31	2" Grooved Venturi	M2-610	1	O
32	2" NPT Grooved Adaptor	M2-611	1	O
33	2" Grooved Butterfly Valve	023-7005-011049	1	
34	2" Hopper	M2-612	1	O
35	Hand Knob	084-135-045	1	
36	Foam Strip	084-1/8" WSTRIP	4"	
37	Lifting Bale	M2-620	1	B
38				
39	3/8" x 2" Bolt	076-13111	6	
	3/8" L/W	076-33622	6	
	3/8" F/W	076-33008	6	
	3/8" Nut	076-36306	6	
40	Isolator Spacer	M2-662-B	2	B
41	Rubber Foot Mount Kit	060-GR48152-603	1	
42	5/16" x 2" Bolt	076-13061	2	
	5/16" L/W	076-33620	2	
	5/16" F/W	076-33006	4	
	5/16" Nut	076-36304	2	
43				
44	"Blue Safty Circles" Decal	070-ST5-038	1	
45	"Out-let" Decal	M2-633-B	1	
46	"Caution pressure" Decal	M2-633-A	1	
47	"Clean Filter" Decal	070-ST5-027-A	1	
48	Patent Plate	071-ST5-002-PAT	1	
49	Serial Number Plate	071-ST5-001-BNK	1	
50	Directional tape	STS-PIPE MARKER	28"	
51	"A" Decal	H360-2-095-A	1	
52	"B" Decal	H360-2-095-B	1	
53	"C" Decal	H360-2-095-C	1	
54	"D" Decal	H360-2-095-D	1	
55	"E" Decal	H360-2-095-E	1	
56				
57	"LOGO" Decal	070-ST5-029	1	
58	2" Strainer Basket		1	
59	Blank Filter Shear	M2-656	1	Y
60	Valve Handle Stop	M2-664	1	
61	Plastic Spacer	084-MFW130A	1	
62	Valve Handle	M2-665	1	

PAINT

Orange = O
Black = B
Yellow = Y



DWR. NUM.	DATE. 05 / 24 / 11
BU-M2922	REV. 07 / 23 / 21


NOT FOR MAC BUILD

PU-M2-D922 ASSEMBLY PARTS LIST

(#PU-M2-D922)

REF #	DESCRIPTION	STS P/N	QTY REQ.	
1	Gorman-Rupp 2" Pump	060-GR8E2-KIT	1	B
2	Yanmar Diesel Engine	033-L100V6D	1	
3	M8 Engine Stud	076-616-031	4	
	M8 FW	076-40357	4	
	M8 LW	076-40383	4	
	M8 Nut	076-40307	4	
4	Spacer	076-607-H18-K	2	
5	Air Deflector	M2-725	1	B
6	M8 x 1.25 x 14 bolt	076-38608	2	
	M8 FW	076-40357	2	
	M8 LW	076-40383	2	
7	3/8" x 1 3/4" Bolt	076-11310	5	
	3/8" FW	076-33008	8	
	3/8" LW	076-33622	5	
	3/8" Nut	076-36306	5	
8	Spacer	060-GR31131-072	4	
9	Muffler Spacer	M2-722	1	B
10	Shims (muffler spacer)	M2-722-A	2 as req.	B
11	Muffler	033-114699-13551	1	
	Exhaust Deflector	114699-13800	1	
12	5/16" x 3" Bolt	076-13065	2	
	5/16" FW	076-33006	2	
	5/16" LW	076-33620	2	
	5/16" Nut	076-36304	2	
13	5/16" x 3" Bolt (Full thread)	076-113812	2	
	5/16" LW	076-33620	2	
	5/16" FW	076-33006	2	
	5/16" Nut	076-36304	4	
14	Exhaust Pipe	M2-760	1	
15	Exhaust Gasket	033-114310-13200	2	
16	Exhaust Cover	M2-724	1	B
17				
18	Grease Cup	060-S36	1	
19	Grease Cup Mount	M2-625	1	B
20	Pipe to Hose connector	019-WEA 1868x4	2	
21	Nylon Hose	025-1928-07	16 1/2"	
22	1 1/4" Exhaust Clamp	031-WAL 35323	1	
23	Pipe Guard	M2-768	1	B
30	"SUCTION" Decal	060-GR6588AG	1	
31	"PRIME" Decal	060-GR6588AH	1	
32	Pressure Warning Tag	060-GR6588BG	1	
33	"DISCHARGE" Decal	060-GR6588BJ	1	
34	"Hot Surface" Decal	070-16043-B-AL	1	
35	"Lift Weight" Decal	M2-726	1	
36	"GREASE" Decal	070-ST S-021-B	1	
37	"Grease Cup" Decal	060-GR6588BD	1	
38	"Model" Decal	M2-733-D	1	

PANT:
Black = B

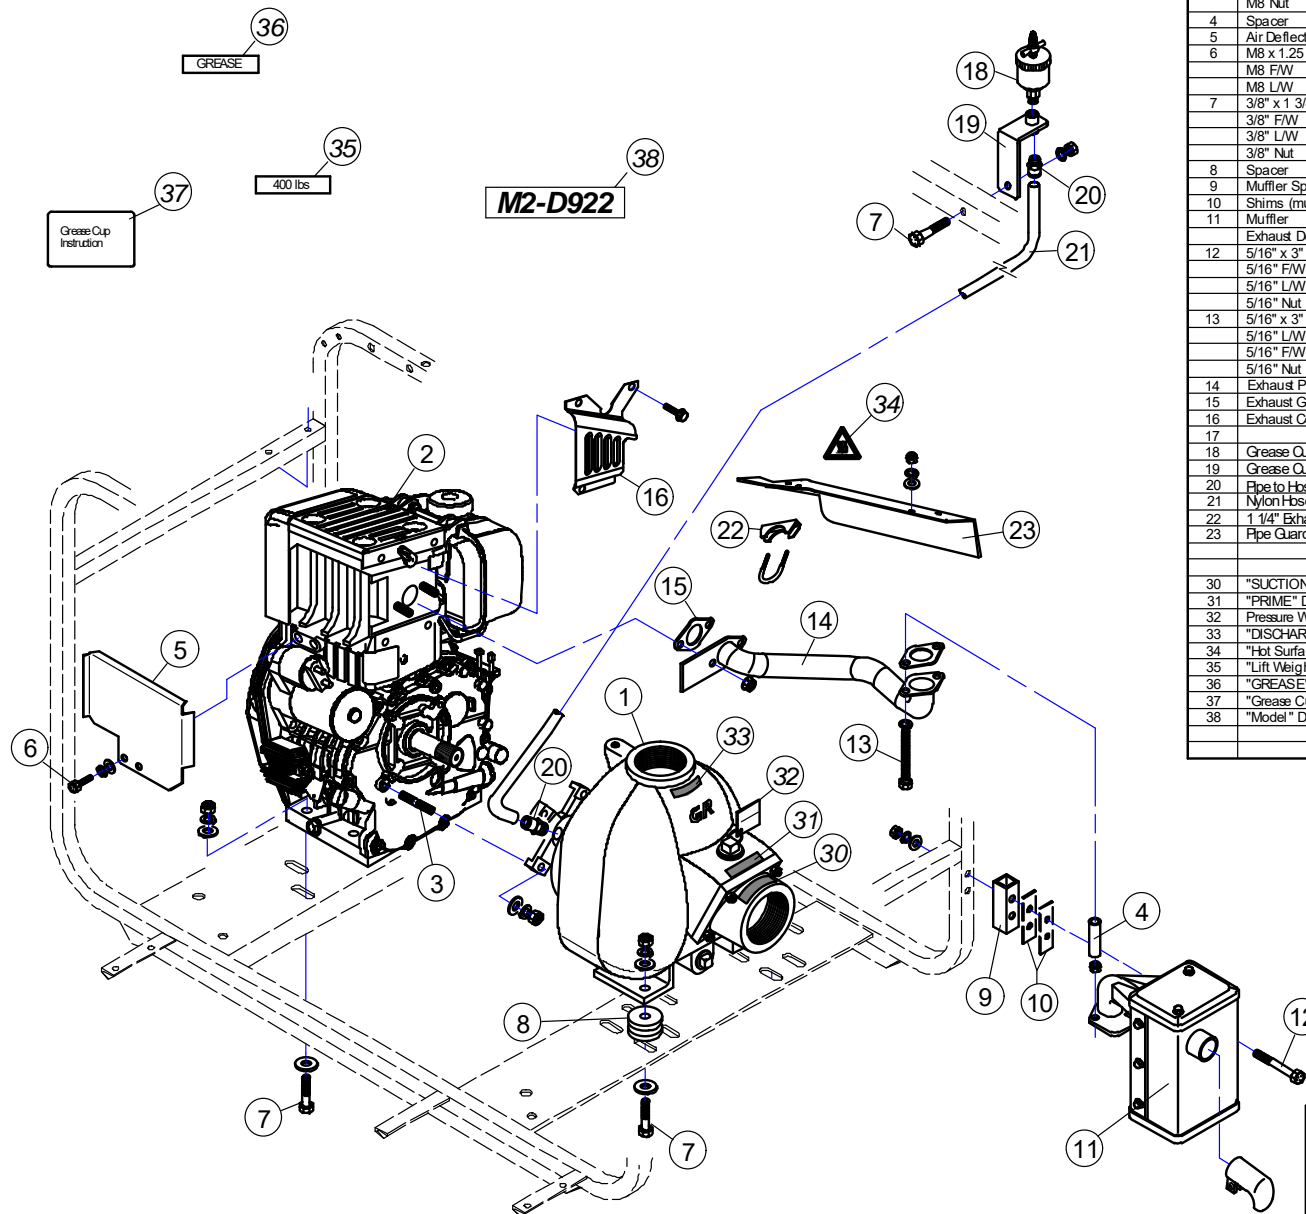


DWR. NUM.	DATE. 10/05/11
#PU-M2-D922	REV. 08/27/18

GR-82E2 ASSEMBLY PARTS LIST

(P/N #060-GR82E2-KIT)

REF #	DESCRIPTION	STS PART NUMBER	QTY REQ.
1	Grease Cup	060-S36	1
2	3/8" Nut	060-GRD0615991	11
	3/8" L/W	076-33622	11
3	Seal Plate Assembly	060-GR427A10010	1
4	Brass Seal Liner	060-GR8314080	1
5	Casing Gasket Set	060-GR229G18000	1
6	Grease Seal assembly	060-GRGS1000	1
7	Shim Pack	060-GR2X17090	1
8**	Impeller (60 Hz.)	060-GR6709 100105.5	1
	Impeller (50 Hz.)	060-GR6709 10010	1
9	Wear Plate	060-GR682215990	1
10	Pump Casing	060-GR46472-309	1
11	Stud	060-GRC060615991	4
12	Pipe Plug	060-GRP1215079	1
13	Hex Cap Screw	060-GRB061415991	1
	Fiber Washer	060-GRKF0618040	1
14	HD Machine Screw	060-GRX040317090	1
	L/W	060-GRJ0417090	1
15	Large Valve Weight	060-GR19B10010	1
16	Check Valve Gasket	060-GR1361G19070	1
17	Small Valve Weight	060-GR135415160	1
18	Suction Flange	060-GR136113040	1
19	Filler Pipe Plug	060-GR48271-063	1

Remote mounted grease cup included in power units

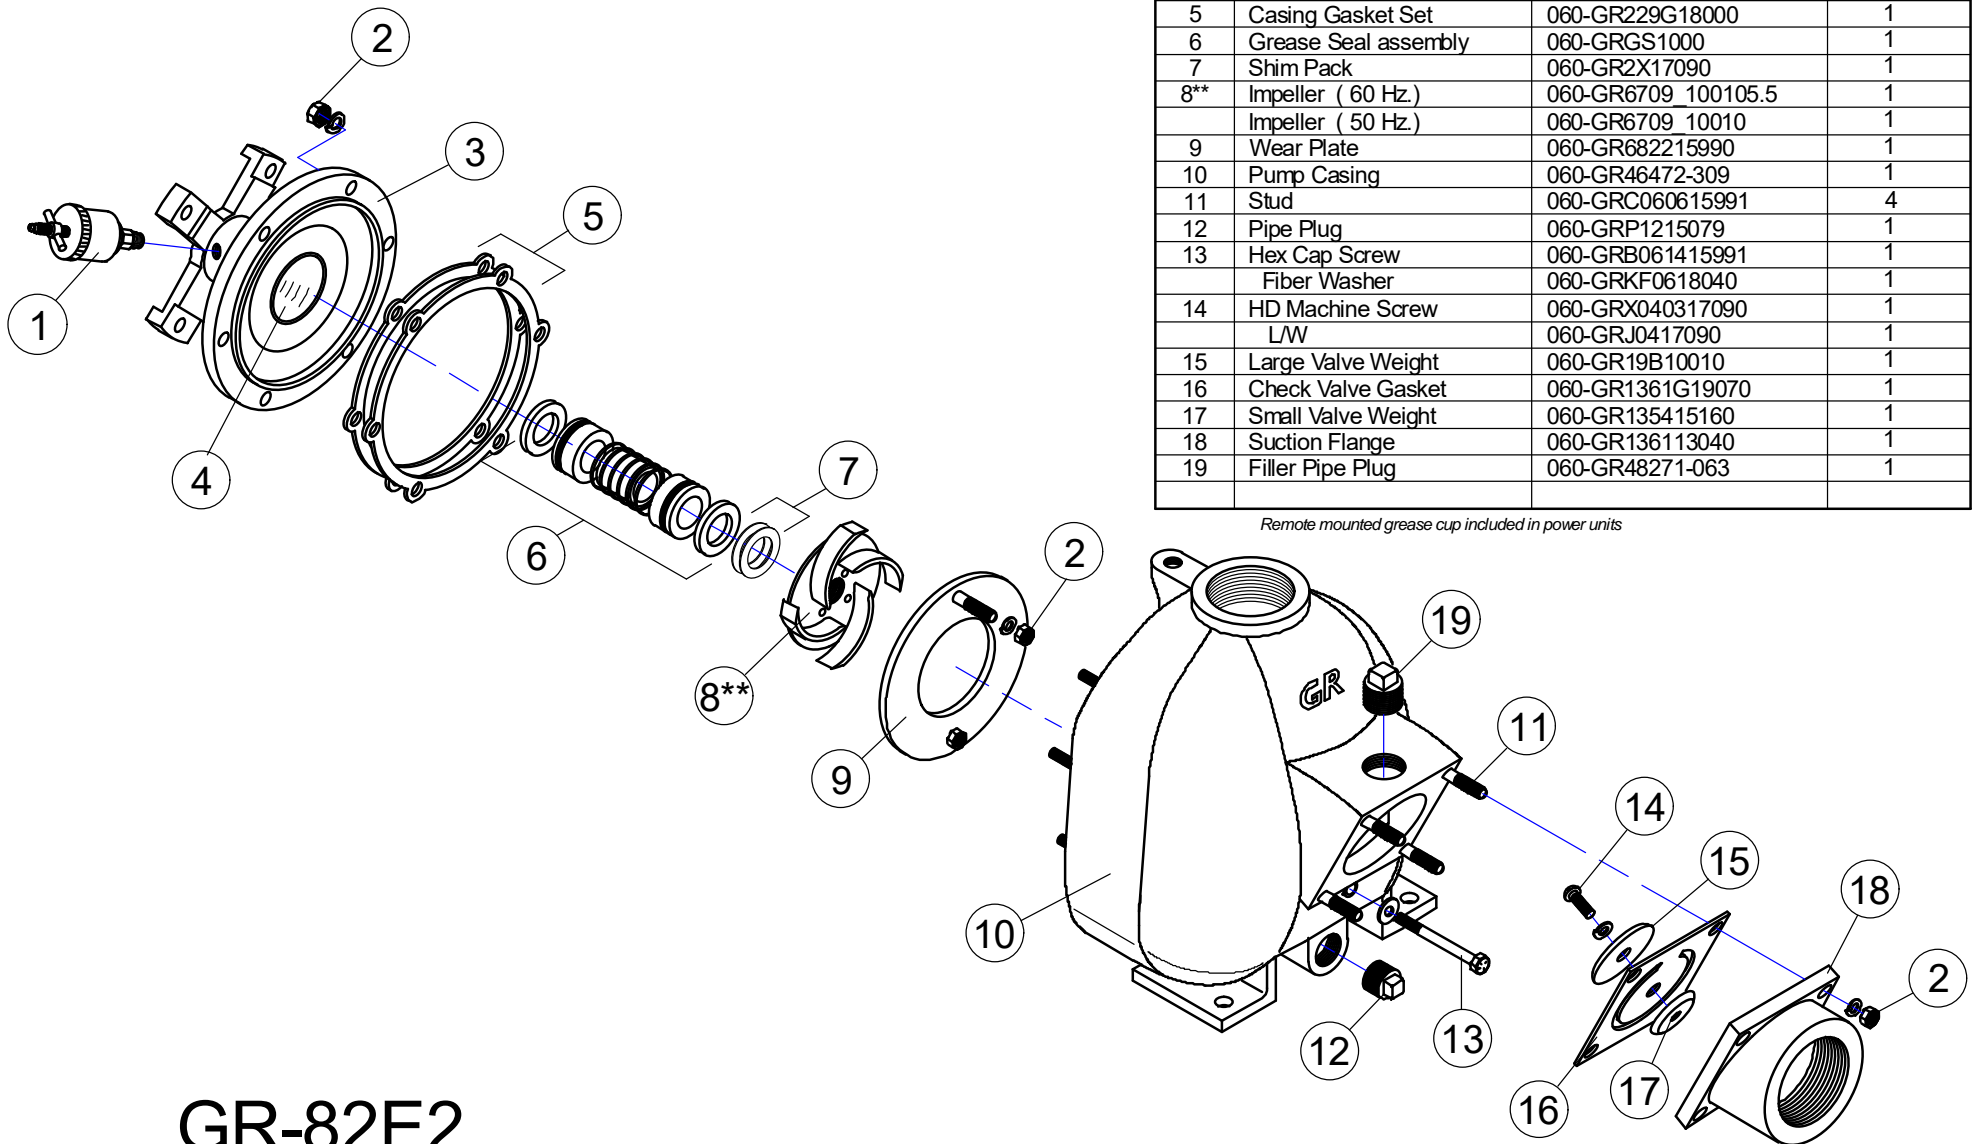


GR-82E2

SECTION #IX

(MAC JR-1200D Mixer Parts Manual)

Use this Parts Manual if the mixer is mounted on a MAC-JR-1200D Unit

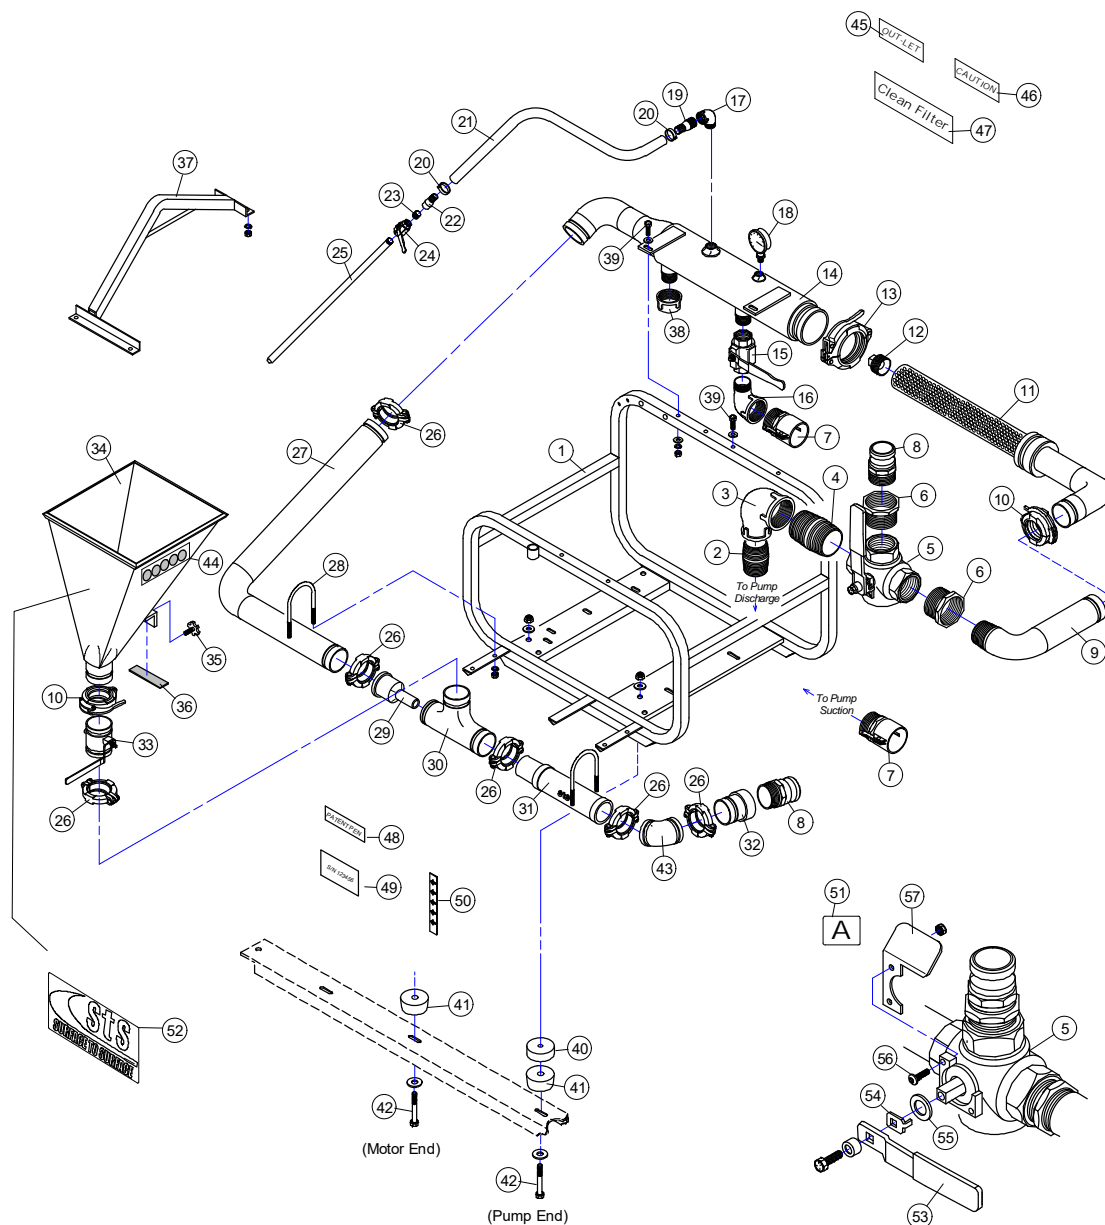

BU-M2922 For MAC-JR

BU-M2922 for MAC-JR ASSEMBLY PARTS LIST

REF #	DESCRIPTION	STS PART NUMBER	QTY REQ.	
1	Crash Frame	M2-601-GHD	1	B
2	2" NPT x Close Nipple	018-330-03700-3	1	B
3	2 1/2" x 2" Reducing Elbow	018-310-01042-0	1	B
4	2 1/2" NPT x Close Nipple	018-330-04000X	1	B
5	2 1/2" 3-way Ball Valve	022-0355N-T	1	
6	2 1/2" x 2" NPT Hex Bushing	018-318-90785-X	2	B
7	2" Female Cam-loc	025-200-B-AL	2	
8	2" Male Cam-loc	025-200-F-AL	2	
9	Pump Discharge Pipe	M2-657	1	B
10	2" Hinge-Loc Coupler	020-390-20048-3	2	B
	2" Coupler EPDM Gasket	020-390-078640		
11	Filter Shear Cartridge	M2-655	1	O
12	1 1/2" Pipe Plug	018-318-90252-5	1	O
13	3" Hinge-Loc Coupler	020-390-20006-1	1	B
	3" Coupler EPDM Gasket	020-390-078681		
14	Filter Shear Housing	M2-616	1	O
15	1 1/2" Ball Valve	022-423-00012-4	1	
16	2" x 1 1/2" NPT Reducing Elbow	018-310-018020-X	1	B
17	1/2" 90° Street Elbow	018-310-01620-9	1	B
18	Gauge	035-CF1C30/060A	1	
19	1/2" NPT x 5/8" Hose Barb	018-1661268222X	1	B
20	PEX Hose Clamp	025-PEX-SS3/4	2	
21	5/8" Clear Cotton Braid Hose	025-K3150-625	31"	
22	Adaptor	M2-618	1	O
23	3/8" NPT x Close Nipple	018-330-00980-4	1	B
24	3/8" Ball Valve	022-423-00002-5	1	
25	Wash Wand	M2-619	1	O
26	2" Groove-Loc Coupler	020-390-00026-3	6	B
	2" Coupler EPDM Gasket	020-390-078640		
27	End Pipe	M2-607	1	O
28	Pipe Clamp	076-42036	2	
29	2" Jetting Nozzel	M2-608	1	O
30	2" Mixing Tee	M2-609	1	O
31	2" Grooved Venturi	M2-610	1	O
32	2" NPT Grooved Adaptor	M2-611	1	O
33	2" Grooved Butterfly Valve	023-7005-011049	1	
34	2" Hopper	M2-612	1	O
35	Hand Knob	084-135-045	1	
36	Foam Strip	084-1/8" WSTRIP	4"	
37	Lifting Bale	M2-620	1	B
38	1 1/2" Pipe Cap	018-318-90043-X	1	B
39	3/8" x 2" Bolt	076-13111	6	
	3/8" L/W	076-33622	6	
	3/8" F/W	076-33008	6	
	3/8" Nut	076-36306	6	
40	Isolator Spacer	M2-662-B	2	B
41	Rubber Foot Mount Kit	060-GR48152-603	1	
42	5/16" x 3" Bolt	076-13065	2	
	5/16" F/W	076-33006	4	
	5/16" Top Lock Nut	076-37262	2	
43	2" Grooved 45° Elbow	020-390-01478-6	1	O
44	"Blue Safty Circles" Decal	070-ST5-038	1	
45	"Out-let" Decal	M2-633-B	1	
46	"Caution pressure" Decal	M2-633-A	1	
47	"Clean Filter" Decal	070-ST5-027-A	1	
48	Patent Plate	071-ST5-002-PAT	1	
49	Serial Number Plate	071-ST5-001-BNK	1	
50	Directional tape	STS-PIPE MARKER	28"	
51	"A" Decal	H360-2-095-A	1	
52	"LOGO" Decal	070-ST5-029	1	
53	Valve Handle	M2-665	1	
54	Valve Handle Stop	M2-664	1	
55	Plastic Spacer	084-MFW130A	1	
56	1/4" x 1" BHCS	076-24053	2	
	1/4" Lock Nut	076-37018	2	
57	Valve Lable Plate (Left)	M2-738-L	1	B

PAINT

Orange = O
Black = B


Surface to Surface Inc.®	
DWR. NUM.	DATE. 05 / 24 / 11
BU-M2922 For MAC	REV. 08 / 19 / 21

PU-M2-D922 ASSEMBLY PARTS LIST

(#PU-M2-D922)

REF #	DESCRIPTION	STS P/N	QTY REQ.	
1	Gorman-Rupp 2" Pump	060-GR8E2-KIT	1	B
2	Yanmar Diesel Engine	033-L100V8D	1	
3	M8 Engine Stud	076-616-031	4	
	M8 F/W	076-40357	4	
	M8 L/W	076-40383	4	
	M8 Nut	076-40307	4	
4	Spacer	076-607-H18-K	2	
5	Air Deflector	M2-725	1	B
6	M8 x 1.25 x 14 bolt	076-38608	2	
	M8 F/W	076-40357	2	
	M8 L/W	076-40383	2	
7	3/8" x 1 3/4" Bolt	076-13110	5	
	3/8" F/W	076-33008	8	
	3/8" L/W	076-33622	5	
	3/8" Nut	076-36306	5	
8	Spacer	060-GR3-1131-072	4	
9	Muffler Spacer	M2-722	1	B
10	Shims (muffler spacer)	M2-722-A	2 as req.	B
11	Muffler	033-114699-13551	1	
	Exhaust Deflector	114699-13800	1	
12	5/16" x 3" Bolt	076-13065	2	
	5/16" F/W	076-33006	2	
	5/16" L/W	076-33620	2	
	5/16" Nut	076-36304	2	
13	5/16" x 3" Bolt (Full thread)	076-13812	2	
	5/16" L/W	076-33620	2	
	5/16" F/W	076-33006	2	
	5/16" Nut	076-36304	4	
14	Exhaust Pipe	M2-760	1	
15	Exhaust Gasket	033-114310-13200	2	
16	Exhaust Cover	M2-724	1	B
17				
18	Grease Cup	060-S36	1	
19	Grease Cup Mount	M2-625	1	B
20	Pipe to Hose connector	019-WEA 1868x6x4	2	
21	Nylon Hose	025-1928-07	16 1/2"	
22	1 1/4" Exhaust Clamp	031-WAL-35323	1	
23	Pipe Guard	M2-768	1	B
30	"SUCTION" Decal	060-GR6588AG	1	
31	"PRIME" Decal	060-GR6588AH	1	
32	Pressure Warning Tag	060-GR6588BG	1	
33	"DISCHARGE" Decal	060-GR6588BJ	1	
34	"Hot Surface" Decal	070-16043-B-AL	1	
35	"Lift Weight" Decal	M2-726	1	
36	"GREASE" Decal	070-ST-S-021-B	1	
37	"Grease Cup" Decal	060-GR6588BD	1	
38	"Model" Decal	M2-733-D	1	

PANT:
Black = B

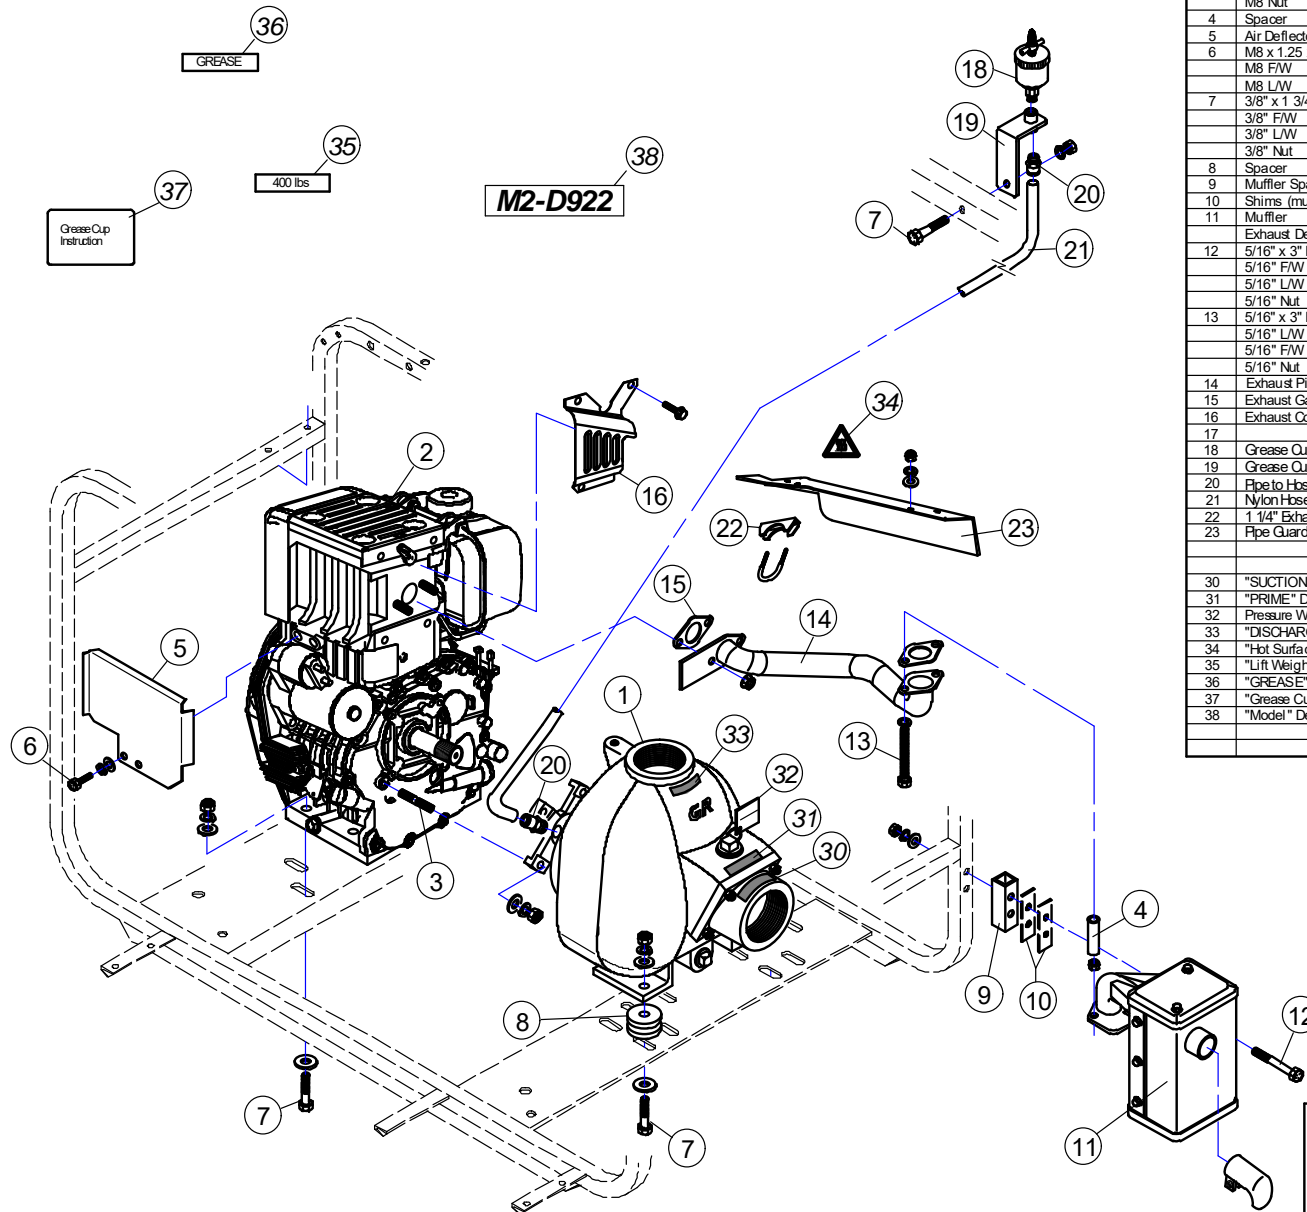

DWR. NUM.	DATE. 10/05/11
#PU-M2-D922	REV. 08/27/18